


Digital Multi Switcher

MSD-V6 Series

MSD-V61U/MSD-V62U

Command Guide
Ver.1.3.0

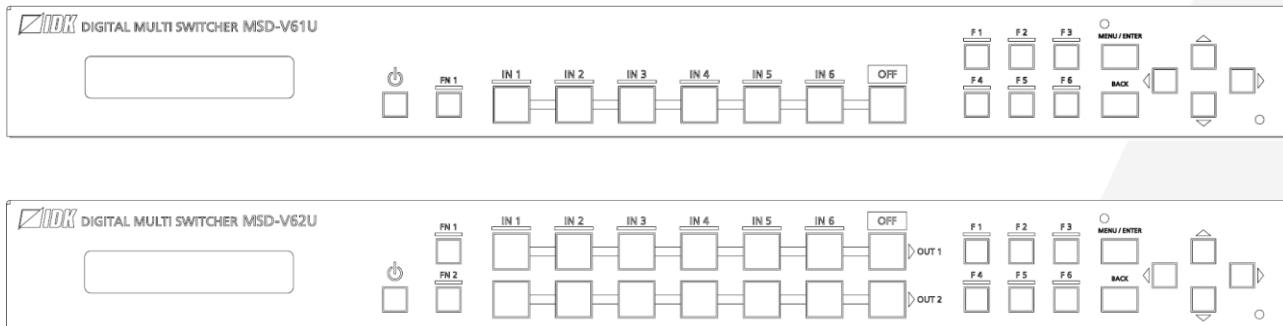

Thank you for choosing our product.

Please thoroughly familiarize yourself with this guide before installing this equipment. We recommend keeping this manual together with the equipment for future reference as needed.

- All rights reserved.
- Some information contained in this guide such as exact product appearance, communication commands, and so on may differ depending on the product version.
- This guide is subject to change without notice. You can download the latest version from IDK's website at: www.idkav.com

About technical documentation

■ Please read the following guides before connecting this equipment to a power source.

| | |
|--|--|
| 1. Safety Instructions Contains important safety instructions for the product to help ensure your own personal safety and protect the product and working environment from potential damage. | Provided with the product. |
| 2. Setup Guide Contains setup information and precautions for installing the product and connecting cables. | Download from www.idkav.com |

■ Please refer to the following guides as needed.

| | |
|---|--|
| 3. Operation Guide Describes how to configure and use the equipment. | Download from www.idkav.com |
| 4. User Guide Contains detailed explanation of functions, setting values, and restrictions. | |
| 5. Command Guide Contains information on controlling the equipment using communication commands through RS-232C or LAN communication. | |

Trademarks

- HDBaseT™ and the HDBaseT Alliance Logo are trademarks of the HDBaseT Alliance.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- SDVoE™ and SDVoE logo are trademarks of SDVoE Alliance.
- Audinate® is a registered trademark of Audinate Pty Ltd. Dante® is a registered trademark of Audinate Pty Ltd.
- All other company and product names mentioned in this document are either registered trademarks or trademarks of their respective owners. In this document, the “®” or “™” marks may not be specified.
- ©2023 IDK Corporation, all rights reserved.

FCC STATEMENT

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

(Class A)

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Unique Identifier

Type of Equipment: Digital Multi Switcher

Model Name: MSD-V61UC, MSD-V61UF, MSD-V61UT, MSD-V62UC, MSD-V62UF, MSD-V62UT

Responsible Party – U.S. Contact Information

Company Name: IDK America Inc.

Address: 72 Grays Bridge Road Suite 1-C, Brookfield, CT 06804

Telephone number: +1-203-204-2445

URL: www.idkav.com

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

(FCC SDoC)

CE MARKING

This equipment complies with the essential requirements of the relevant European health, safety and environmental protection legislation.

WEEE MARKING

Waste Electrical and Electronic Equipment (WEEE), Directive 2002/96/EC

(This directive is only valid in the EU.)

This equipment complies with the WEEE Directive (2002/96/EC) marking requirement.

The left marking indicates that you must not discard this electrical/electronic equipment in domestic household waste.

Contents

| | |
|---|----|
| About this Guide | 5 |
| Command and Response | 5 |
| Command format | 5 |
| Response examples | 5 |
| RS-232C communication | 6 |
| RS-232C communication specification. | 6 |
| Connecting RS-232C cable | 6 |
| LAN communication | 7 |
| LAN communication specification | 7 |
| LAN connector specification | 7 |
| The number of TCP-IP connections | 7 |
| Command list | 8 |
| Details of commands | 11 |
| Error status | 11 |
| Start-up status | 11 |
| Selecting I/O channels | 12 |
| Output resolution | 14 |
| Output | 17 |
| Input resolution | 19 |
| Input | 20 |
| Input channel automatic switching | 21 |
| Output audio | 23 |
| Input audio | 25 |
| EDID | 27 |
| RS-232C | 29 |
| LAN | 30 |
| Control commands | 32 |
| User preset | 41 |
| Bitmap | 47 |
| Configuring MSD-V6 | 47 |
| Status | 49 |
| Unsolicited status notification | 54 |

About this Guide

The MSD-V6 series switchers (hereafter referred to as MSD-V6) can be remotely configured and controlled via RS-232C communication or LAN communication.

This guide describes the operation of the MSD-V6 via commands based on the MSD-V62U.

Command and Response

Setting command : For setting or changing commands

Getting command : For getting the current settings or statuses

Command format

A command consists of [@] (40 in hex), 3 one-byte alphabetical characters (Not case sensitive), and parameters. [,] (a comma, 2C in hex) is indicated between two characters.

The number of parameters varies depending on commands.

Processing is executed by sending line endings <CR><LF> (return+line feed, 0D and 0A in hex) at the end of the command. The line endings are added to each response.

@SPM,2<CR><LF> in hex:

| | Header | 3 one-byte alphabetical characters | | | Comma | Parameter | Line endings | |
|-------|--------|------------------------------------|----|----|-------|-----------|--------------|----|
| ASCII | @ | S | P | M | , | 2 | CR | LF |
| Hex | 40 | 53 | 50 | 4D | 2C | 32 | 0D | 0A |

Response examples

If the command is valid and performed,

Setting: the same command string is returned.

Command example → @SSW,1,1<CR><LF>

Response example ← @SSW,1,1<CR><LF>

Getting: the current settings are returned in ascending order following the sent command.

Command example → @GSW,1<CR><LF>

Response example ← @GSW,1,1,1<CR><LF>

Error response:

If the command is invalid, an error response ("@ERR Error status (P.11)") is returned.

Command example → @XXX<CR><LF>

Response example ← @ERR,2<CR><LF>

RS-232C communication

It takes about 10 seconds at maximum to be ready for normal operation after powering up.

If RS-232C communication of HDBaseT/10GbE input or output, the maximum time depends on the system configuration.


RS-232C communication specification

| | |
|----------------------|---|
| Compliant standard | RS-232C |
| Baud rate | 4800/9600/14400/19200/38400/57600/115200 (bps) |
| Data bit length | 7/8 (bit) |
| Parity check | NONE, ODD, EVEN |
| Stop bit | 1/2 (bit) |
| X parameter | Invalid |
| Flow control | None |
| Delimiter | CR LF (Carriage return and line feed, 0D and 0A in hex) |
| Communication method | Full duplex |

Connecting RS-232C cable

Insert and secure the wires from the RS-232C cable into the supplied 3-pin captive screw connector, and then insert the captive screw connector into the mating connector on the MSD-V6.

28 AWG to 16 AWG conductor gauge is recommended. The recommended wire strip length is 0.28 in. (7 mm). Short RTS/CTS and DTR/DSR as needed.

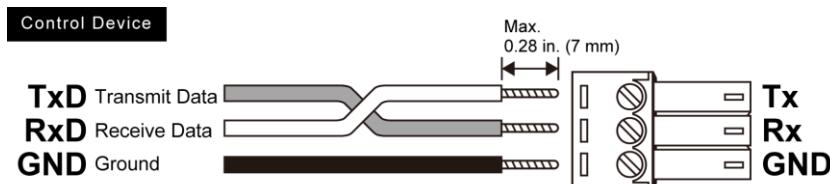


LAN communication

It takes about 13 seconds at maximum to be ready for normal operation after powering up.
If LAN communication of HDBaseT/10GbE input or output, the maximum time depends on the system configuration.

LAN communication specification

| | |
|-------------------------------|---|
| Physical layer | 10Base-T (IEEE802.3i)/100Base-TX (IEEE802.3u) |
| Network layer | ARP/IP/ICMP |
| Transport layer | TCP Port used for command control : 1100 Port used for WEB browser control(HTTP) : 80 UDP Port used for status notification: 1 to 65535 |
| Maximum number of connections | 8 |

LAN connector specification

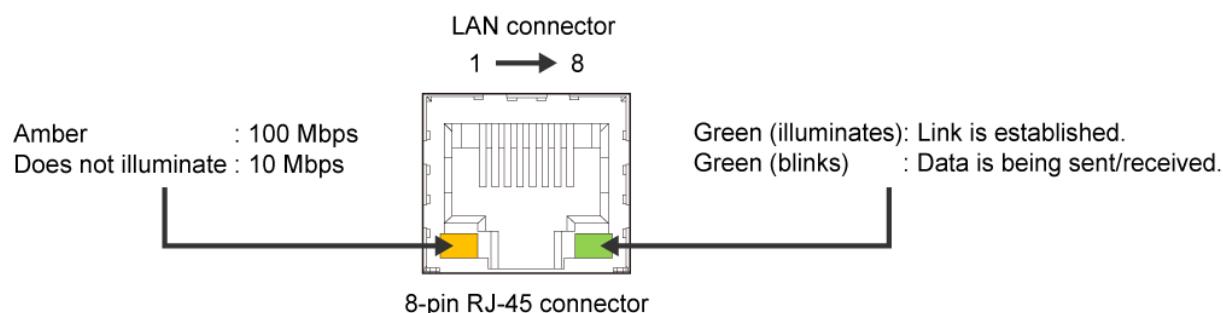

Auto MDI/MDI-X that distinguishes and switches straight/cross cables automatically is supported.

The number of TCP-IP connections

The MSD-V6 supports up to eight simultaneous TCP-IP connections (Eight logical ports). To maintain optimal system accessibility, it is advisable to issue **port-open** and **port-close** commands before and after command or query strings are issued. This approach enables eight or more control devices to be effectively interfaced simultaneously and without concern for communication errors.

As a safeguard, the MSD-V6 incorporates a timeout window for each port. If any port is inactive for more than 30 seconds (by default), it will be closed automatically.

You can change the timeout setting using “**@GLD/@SLD Automatic disconnection time (Timeout) (P.31)**”.

Command list

■ Error status

| | | |
|------|--------------|----|
| @ERR | Error status | 11 |
|------|--------------|----|

■ Start-up status

| | | |
|-----------|-----------------|----|
| @GDS/@SDS | Start-up status | 11 |
|-----------|-----------------|----|

■ Selecting I/O channels

| | | |
|-----------|--|----|
| @GSW/@SSW | Switching video and audio channel simultaneously | 12 |
| @GSV/@SSV | Switching video channel | 13 |
| @GSA/@SSA | Switching audio channel | 13 |

■ Output resolution

| | | |
|-----------|------------------------------|----|
| @GOT/@SOT | Output resolution | 14 |
| @GUM/@SUM | Aspect ratio for sink device | 15 |
| @GSD/@SSD | Image position/Image size | 15 |
| @GTP/@STP | Test pattern | 16 |
| @GPI/@SPI | PinP output | 16 |

■ Output

| | | |
|-----------|---------------------|----|
| @GVO/@SVO | Signal output | 17 |
| @GDB/@SDB | Video mute | 17 |
| @GEN/@SEN | HDCP authentication | 18 |
| @HAU | HDCP re-encryption | 18 |
| @GCE/@SCE | CEC connection | 18 |

■ Input resolution

| | | |
|-----------|---------------------------|----|
| @GAP/@SAP | Aspect ratio | 19 |
| @GAR/@SAR | Aspect ratio control | 19 |
| @GNW/@SNW | Image position/Image size | 20 |

■ Input

| | | |
|-----------|---------------------------|----|
| @GIE/@SIE | Selecting input connector | 20 |
| @GHE/@SHE | HDCP input | 21 |

■ Input channel automatic switching

| | | |
|-----------|---------------------------------------|----|
| @GAU/@SAU | Signal ON priority | 21 |
| @GOF/@SOF | Signal OFF priority | 22 |
| @GAD/@SAD | Switching mode of automatic switching | 22 |

■ Output audio

| | | |
|-----------|------------------------------|----|
| @GUC/@SUC | Audio output | 23 |
| @GAV/@SAV | Audio level | 23 |
| @SOL | Adjusting output audio level | 23 |
| @GOL | Output audio limit status | 24 |
| @GAM/@SAM | Mute | 24 |
| @GAE/@SAE | Analog audio output | 24 |
| @GDE/@SDE | Dante output | 25 |

■ Input audio

| | | |
|-----------|-----------------------------|----|
| @GAS/@SAS | Input audio | 25 |
| @GSO/@SSO | Audio level | 26 |
| @SDZ | Adjusting input audio level | 26 |
| @GDZ | Input audio limit status | 26 |
| @GAW/@SAW | Stable wait (Audio signal) | 27 |

■ EDID

| | | |
|-----------|----------------|----|
| @GED/@SED | EDID selection | 27 |
| @GVF/@SVF | Resolution | 28 |

■ RS-232C

| | | |
|-----------|-----------------------|----|
| @GCT/@SCT | Communication setting | 29 |
| @GCF/@SCF | Operation mode | 29 |

■ LAN

| | | |
|-----------|--|----|
| @GIP/@SIP | IP address | 30 |
| @GSB/@SSB | Subnet mask | 30 |
| @GGW/@SGW | Gateway address | 30 |
| @GMC | MAC address | 30 |
| @GLG/@SLG | Control command destination | 31 |
| @GLD/@SLD | Automatic disconnection time (Timeout) | 31 |

■ Control commands

| | | |
|-----------|--|----|
| @GEC/@SEC | Registering/Editing control command (Communication command) | 32 |
| @GEC/@SEC | Registering/Editing control command (Displaying received data) | 34 |
| @GEC/@SEC | Registering/Editing control command (Contact closure) | 36 |
| @GEC/@SEC | Registering/Editing control command (CEC) | 37 |
| @GRC/@SRC | Registering/Editing reply command | 38 |
| @GCC/@SCC | Command link | 39 |
| @EXC | Command execution | 41 |
| @DEC | Initializing registered command data/function or link | 41 |

■ User preset

| | | |
|-----------|---|----|
| @SCM | Storing crosspoint memory | 41 |
| @SCV | Storing crosspoint memory (Setting video input channel) | 42 |
| @SCA | Storing crosspoint memory (Setting audio input channel) | 42 |
| @GCM/@ECM | Editing crosspoint memory | 43 |
| @GCV/@ECV | Editing crosspoint memory (Setting video input channel) | 44 |
| @GCA/@ECA | Editing crosspoint memory (Setting audio input channel) | 44 |
| @RCM | Recalling crosspoint memory | 45 |
| @RCV | Recalling crosspoint memory (Setting video input channel) | 45 |
| @RCA | Recalling crosspoint memory (Setting video input channel) | 45 |
| @SPM | Storing preset memory | 45 |
| @RPM | Recalling preset memory | 46 |
| @SWM | Storing pattern memory | 46 |
| @RWM | Recalling pattern memory | 46 |

■ Bitmap

| | | |
|-----------|---------------|----|
| @GBM/@SBM | Bitmap output | 47 |
|-----------|---------------|----|

■ Configuring MSD-V6

| | | |
|-----------|----------------------------|----|
| @GFA/@SFA | Function button assignment | 47 |
| @RBT | Reboot | 47 |
| @CLR | Initialization | 48 |

■ Status

| | | |
|------|-----------------------------------|----|
| @GSS | Input signal/Output signal status | 49 |
| @GES | Viewing sink device EDID | 52 |
| @GHC | System check | 53 |
| @GIV | Device information | 53 |

■ Unsolicited status notification

| | | |
|-----------|---|----|
| @GDA/@SDA | IP address/UDP port number of destination | 55 |
| @GPH/@SPH | Notification interval | 56 |
| @PSH | Unsolicited status notification | 57 |
| @AIN | Input signal status (For each connector) | 58 |
| @AOT | Output signal status (For each channel) | 60 |
| @GAA | Alarm status | 62 |

Details of commands

Default values are shaded.

Optional descriptions are indicated in parentheses.

Error status

| @ERR | Error status |
|---|--|
| Response | @ERR,error<CR><LF> |
| error: Error status | |
| 1 = Erroneous format or value | |
| 2 = Undefined command or wrong format | |
| 3 = The command could not be executed. | |
| 4 = Loading EDID from the sink device failed. | |
| 10 = The command could not be executed, because it is in standby status. | |
| 30 = The command could not be executed, because the control command was not registered. | |
| 31 = The command could not be executed since another command was being executed. | |
| 32 = The control command was stopped according to the stop condition. | |
| 33 = The control command was stopped since the number of retries exceeded the set value of RETRY. | |
| 34 = The control command of PJLink was stopped since the password did not match. | |
| Getting example | |
| @SDS<CR><LF> | Setting the start-up status |
| @ERR,1<CR><LF> | Command format or parameter was invalid. |

Start-up status

| @GDS/@SDS | | Start-up status |
|---|----------|-----------------------------------|
| Getting | Command | @GDS<CR><LF> |
| | Response | @GDS,state<CR><LF> |
| Setting | Command | @SDS,state<CR><LF> |
| state: Start-up status 0 = OFF (Standby) 1 = ON (Powered on) | | |
| Getting example | | |
| @GDS<CR><LF> @GDS,1<CR><LF> | | Getting the start-up status ON |
| Setting example | | |
| @SDS,1<CR><LF> | | Setting the start-up status to ON |

Selecting I/O channels

| @GSW/@SSW | | Switching video and audio channel simultaneously |
|-----------------|----------|---|
| Getting | Command | @GSW<CR><LF> |
| | Response | @GSW,video_main_1,video_main_1,video_pinp_1,video_main_2,video_main_2, video_pinp_2<CR><LF> |
| Setting | Command | @SSW,input,window,(input,window···)<CR><LF> |
| | | video_main_1-2 : Video input channel of the OUT1/OUT2 main window audio_main_1-2 : OUT1/OUT2 audio input channel video_pinp_1-2 : Video input channel of the OUT1/OUT2 PinP window 0 = INOFF 1 to 6 = IN1 to IN6 |
| | | input: Video/audio input channel 0 = INOFF 1 to 6 = IN1 to IN6 |
| | | window: Video/audio window 0 = All windows 1 = OUT1 main window 2 = OUT2 main window 201 = OUT1 PinP window 202 = OUT2 PinP window |
| Getting example | | Getting the video/audio input channel <ul style="list-style-type: none">• Video input channel of the OUT1 main window : IN2• OUT1 audio input channel : IN2• Video input channel of the OUT1 PinP window : IN1• Video input channel of the OUT2 main window : IN1• OUT2 audio input channel : IN3• Video input channel of the OUT2 PinP window : IN4 |
| Setting example | | @SSW,1,0<CR><LF> |
| | | Setting the input channel of all windows to IN1 |

| @GSV/@SSV | | Switching video channel |
|---|----------|---|
| Getting | Command | @GSV<CR><LF> |
| | Response | @GSV,video_main_1,video_pinp_1,video_main_2,video_pinp_2<CR><LF> |
| Setting | Command | @SSV,input,window,(input,window · · ·)<CR><LF> |
| video_main_1-2 : Video input channel of the OUT1/OUT2 main window video_pinp_1-2 : Video input channel of the OUT1/OUT2 PinP window 0 = INOFF 1 to 6 = IN1 to IN6 | | |
| input: Video input channel 0 = INOFF 1 to 6 = IN1 to IN6 | | |
| window: Video window 0 = All windows 1 = OUT1 main window 2 = OUT2 main window 201 = OUT1 PinP window 202 = OUT2 PinP window | | |
| Getting example | | |
| @GSV<CR><LF> @GSV,2,1,3,4<CR><LF> | | Getting the video input channel <ul style="list-style-type: none">· OUT1 main window : IN2· OUT1 PinP window : IN1· OUT2 main window : IN3· OUT2 PinP window : IN4 |
| Setting example | | |
| @SSV,1,0<CR><LF> | | Setting the video input channel of all windows to IN1 |

| @GSA/@SSA | | Switching audio channel |
|--|----------|---|
| Getting | Command | @GSA<CR><LF> |
| | Response | @GSA,audio_main_1,audio_main_2<CR><LF> |
| Setting | Command | @SSA,input,output,(input,output)<CR><LF> |
| audio_main_1-2: OUT1/OUT2 audio input channel 0 = INOFF 1 to 6 = IN1 to IN6 | | |
| input: Audio input channel 0 = INOFF 1 to 6 = IN1 to IN6 | | |
| output: Audio output channel 0 = All outputs 1 = OUT1 2 = OUT2 | | |
| Getting example | | |
| @GSA<CR><LF> @GSA,1,2<CR><LF> | | Getting the audio input channel <ul style="list-style-type: none">· OUT1: IN1· OUT2: IN2 |
| Setting example | | |
| @SSA,1,1<CR><LF> | | Setting the OUT1 audio input channel to IN1 |

Output resolution

| @GOT/@SOT | | Output resolution | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|-------------------------|--|---------------------|---------------------|------------------------|----------------------|---------------------|---------------------|------------------------|-----------------------|------------------------|-----------------------|-------------------------|-------------------------|------------------------|------------------------|-----------------------|------------------------|--|-------------------|----------------|----------------|-------------------|----------------|-----------------|--------------------|-----------------|-----------------|--------------------|-----------------|--|------------------------|---------------------|---------------------|------------------------|---------------------|---------------------|------------------------|---------------------|------------------------|---------------------|---------------------|------------------------|---------------------|---------------------|------------------------|---------------------|
| Getting | Command | @GOT,output<CR><LF> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Response | @GOT,output,auto,resolution(,auto,resolution)<CR><LF> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Setting | Command | @SOT,output,auto,resolution<CR><LF> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| output: Output channel 0 = All outputs 1 = OUT1 2 = OUT2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| auto: Output resolution mode 0 = Resolution selected below (resolution) 1 = AUTO_A 2 = AUTO_B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| resolution: Output resolution | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table> <tbody> <tr><td>3 = 1024x768 (XGA)</td><td>4 = 1280x768 (WXGA)</td></tr> <tr><td>5 = 1280x800 (WXGA)</td><td>6 = 1280x960 (QuadVGA)</td></tr> <tr><td>7 = 1280x1024 (SXGA)</td><td>8 = 1360x768 (WXGA)</td></tr> <tr><td>9 = 1366x768 (WXGA)</td><td>10 = 1400x1050 (SXGA+)</td></tr> <tr><td>11 = 1440x900 (WXGA+)</td><td>12 = 1600x900 (WXGA++)</td></tr> <tr><td>13 = 1600x1200 (UXGA)</td><td>14 = 1680x1050 (WSXGA+)</td></tr> <tr><td>15 = 1920x1080 (VESAHD)</td><td>16 = 1920x1200 (WUXGA)</td></tr> <tr><td>17 = 2048x1152 (QWXGA)</td><td>20 = 2560x1440 (WQHD)</td></tr> <tr><td>21 = 2560x1600 (WQXGA)</td><td></td></tr> <tr><td>31 = 480p 59.94Hz</td><td>33 = 576p 50Hz</td></tr> <tr><td>34 = 720p 50Hz</td><td>35 = 720p 59.94Hz</td></tr> <tr><td>36 = 720p 60Hz</td><td>37 = 1080i 50Hz</td></tr> <tr><td>38 = 1080i 59.94Hz</td><td>39 = 1080i 60Hz</td></tr> <tr><td>40 = 1080p 50Hz</td><td>41 = 1080p 59.94Hz</td></tr> <tr><td>42 = 1080p 60Hz</td><td></td></tr> <tr><td>50 = 3840x2160 23.98Hz</td><td>51 = 3840x2160 24Hz</td></tr> <tr><td>52 = 3840x2160 25Hz</td><td>53 = 3840x2160 29.97Hz</td></tr> <tr><td>54 = 3840x2160 30Hz</td><td>55 = 3840x2160 50Hz</td></tr> <tr><td>56 = 3840x2160 59.94Hz</td><td>57 = 3840x2160 60Hz</td></tr> <tr><td>60 = 4096x2160 23.98Hz</td><td>61 = 4096x2160 24Hz</td></tr> <tr><td>62 = 4096x2160 25Hz</td><td>63 = 4096x2160 29.97Hz</td></tr> <tr><td>64 = 4096x2160 30Hz</td><td>65 = 4096x2160 50Hz</td></tr> <tr><td>66 = 4096x2160 59.94Hz</td><td>67 = 4096x2160 60Hz</td></tr> </tbody> </table> | | 3 = 1024x768 (XGA) | 4 = 1280x768 (WXGA) | 5 = 1280x800 (WXGA) | 6 = 1280x960 (QuadVGA) | 7 = 1280x1024 (SXGA) | 8 = 1360x768 (WXGA) | 9 = 1366x768 (WXGA) | 10 = 1400x1050 (SXGA+) | 11 = 1440x900 (WXGA+) | 12 = 1600x900 (WXGA++) | 13 = 1600x1200 (UXGA) | 14 = 1680x1050 (WSXGA+) | 15 = 1920x1080 (VESAHD) | 16 = 1920x1200 (WUXGA) | 17 = 2048x1152 (QWXGA) | 20 = 2560x1440 (WQHD) | 21 = 2560x1600 (WQXGA) | | 31 = 480p 59.94Hz | 33 = 576p 50Hz | 34 = 720p 50Hz | 35 = 720p 59.94Hz | 36 = 720p 60Hz | 37 = 1080i 50Hz | 38 = 1080i 59.94Hz | 39 = 1080i 60Hz | 40 = 1080p 50Hz | 41 = 1080p 59.94Hz | 42 = 1080p 60Hz | | 50 = 3840x2160 23.98Hz | 51 = 3840x2160 24Hz | 52 = 3840x2160 25Hz | 53 = 3840x2160 29.97Hz | 54 = 3840x2160 30Hz | 55 = 3840x2160 50Hz | 56 = 3840x2160 59.94Hz | 57 = 3840x2160 60Hz | 60 = 4096x2160 23.98Hz | 61 = 4096x2160 24Hz | 62 = 4096x2160 25Hz | 63 = 4096x2160 29.97Hz | 64 = 4096x2160 30Hz | 65 = 4096x2160 50Hz | 66 = 4096x2160 59.94Hz | 67 = 4096x2160 60Hz |
| 3 = 1024x768 (XGA) | 4 = 1280x768 (WXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 = 1280x800 (WXGA) | 6 = 1280x960 (QuadVGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 = 1280x1024 (SXGA) | 8 = 1360x768 (WXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 = 1366x768 (WXGA) | 10 = 1400x1050 (SXGA+) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 = 1440x900 (WXGA+) | 12 = 1600x900 (WXGA++) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 = 1600x1200 (UXGA) | 14 = 1680x1050 (WSXGA+) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 = 1920x1080 (VESAHD) | 16 = 1920x1200 (WUXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 17 = 2048x1152 (QWXGA) | 20 = 2560x1440 (WQHD) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 21 = 2560x1600 (WQXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 31 = 480p 59.94Hz | 33 = 576p 50Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 34 = 720p 50Hz | 35 = 720p 59.94Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 36 = 720p 60Hz | 37 = 1080i 50Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 38 = 1080i 59.94Hz | 39 = 1080i 60Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 40 = 1080p 50Hz | 41 = 1080p 59.94Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42 = 1080p 60Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 50 = 3840x2160 23.98Hz | 51 = 3840x2160 24Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 52 = 3840x2160 25Hz | 53 = 3840x2160 29.97Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 54 = 3840x2160 30Hz | 55 = 3840x2160 50Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 56 = 3840x2160 59.94Hz | 57 = 3840x2160 60Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 60 = 4096x2160 23.98Hz | 61 = 4096x2160 24Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 62 = 4096x2160 25Hz | 63 = 4096x2160 29.97Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 64 = 4096x2160 30Hz | 65 = 4096x2160 50Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 66 = 4096x2160 59.94Hz | 67 = 4096x2160 60Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| If output resolution mode is set to [AUTO-A] or [AUTO-B], select [0] for this parameter. For getting command, the current output resolution is returned. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Getting example | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| @GOT,1<CR><LF> @GOT,1,1,7<CR><LF> | | Getting the OUT1 output resolution <ul style="list-style-type: none">▪ Output resolution mode : AUTO_A▪ Output resolution : 1280x1024 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Setting example | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| @SOT,1,0,11<CR><LF> | | Setting the OUT1 output resolution to 1440x900 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| @GUM/@SUM | | Aspect ratio for sink device |
|--|----------|---|
| Getting | Command | @GUM,output<CR><LF> |
| | Response | @GUM,output,aspect(,aspect)<CR><LF> |
| Setting | Command | @SUM,output,aspect<CR><LF> |
| output: Output channel 0 = All outputs 1 = OUT1 2 = OUT2 | | |
| aspect: Aspect ratio for sink device 0 = RESOLUTION 1 = FULL 2 = 4:3 3 = 5:3 4 = 5:4 5 = 16:9 6 = 16:10 7 = 256:135 | | |
| Getting example | | |
| @GUM,0<CR><LF> @GUM,0,5,2<CR><LF> | | Getting the aspect ratio for sink device ▪ OUT1 : 16:9 ▪ OUT2 : 4:3 |
| Setting example | | |
| @SUM,1,5<CR><LF> | | Setting the OUT1 aspect ratio for sink device to 16:9 |

| @GSD/@SSD | | Image position/Image size |
|---|----------|--|
| Getting | Command | @GSD,output<CR><LF> |
| | Response | @GSD,output,h_position,v_position,h_size,v_size(,h_position,v_position, h_size···)<CR><LF> |
| Setting | Command | @SSD,output,h_position,v_position,h_size,v_size<CR><LF> |
| output: Output channel 0 = All outputs 1 = OUT1 main window 2 = OUT2 main window 201 = OUT1 PinP window 202 = OUT2 PinP window | | |
| h_position: Horizontal image position -40000 to 10000 = -400.00% to 100.00% 0 (0.00%) | | |
| v_position: Vertical image position -40000 to 10000 = -400.00% to 100.00% 0 (0.00%) | | |
| h_size: Horizontal image size 2000 to 40000 = 20.00% to 400.00% 10000 (100.00%) | | |
| v_size: Vertical image size 2000 to 40000 = 20.00% to 400.00% 10000 (100.00%) | | |
| Getting example | | |
| @GSD,1<CR><LF> @GSD,1,0,0,10000,10000<CR><LF> | | Getting the image position/image size of the OUT1 main window ▪ Horizontal/Vertical image position : 0.00% ▪ Horizontal/Vertical image size : 100.00% |
| Setting example | | |
| @SSD,1,0,0,10000,10000<CR><LF> | | Setting the image position/image size of the OUT1 main window as follows: ▪ Horizontal/Vertical image position : 0.00% ▪ Horizontal/Vertical image size : 100.00% |

| @GTP/@STP | | Test pattern | | | | | | | | | | | | | | | | | | |
|---|------------------------|---|---------|------------------|------------------|-------------------|-------------------|--------------------|----------------------|-----------------------|----------------------|----------------|-------------------|------------------|------------------|-------------------|----------------------|------------------------|----------------------|------------------------|
| Getting | Command | @GTP,output<CR><LF> | | | | | | | | | | | | | | | | | | |
| | Response | @GTP,output,pattern,scroll(,pattern,scroll)<CR><LF> | | | | | | | | | | | | | | | | | | |
| Setting | Command | @STP,output,pattern,scroll<CR><LF> | | | | | | | | | | | | | | | | | | |
| output: Output channel 0 = All outputs 1 = OUT1 2 = OUT2 | | | | | | | | | | | | | | | | | | | | |
| pattern | | | | | | | | | | | | | | | | | | | | |
| <table> <tbody> <tr><td>0 = OFF</td><td>1 = V-COLOR BAR*</td></tr> <tr><td>2 = H-COLOR BAR*</td><td>3 = V-GRAY SCALE*</td></tr> <tr><td>4 = H-GRAY SCALE*</td><td>5 = VERTICAL RAMP*</td></tr> <tr><td>6 = HORIZONTAL RAMP*</td><td>7 = 100% WHITE RASTER</td></tr> <tr><td>8 = 50% WHITE RASTER</td><td>9 = RED RASTER</td></tr> <tr><td>10 = GREEN RASTER</td><td>11 = BLUE RASTER</td></tr> <tr><td>12 = CROSS HATCH</td><td>13 = OUTPUT FRAME</td></tr> <tr><td>14 = VERTICAL STRIPE</td><td>15 = HORIZONTAL STRIPE</td></tr> <tr><td>16 = VERTICAL ZEBRA*</td><td>17 = HORIZONTAL ZEBRA*</td></tr> </tbody> </table> | | | 0 = OFF | 1 = V-COLOR BAR* | 2 = H-COLOR BAR* | 3 = V-GRAY SCALE* | 4 = H-GRAY SCALE* | 5 = VERTICAL RAMP* | 6 = HORIZONTAL RAMP* | 7 = 100% WHITE RASTER | 8 = 50% WHITE RASTER | 9 = RED RASTER | 10 = GREEN RASTER | 11 = BLUE RASTER | 12 = CROSS HATCH | 13 = OUTPUT FRAME | 14 = VERTICAL STRIPE | 15 = HORIZONTAL STRIPE | 16 = VERTICAL ZEBRA* | 17 = HORIZONTAL ZEBRA* |
| 0 = OFF | 1 = V-COLOR BAR* | | | | | | | | | | | | | | | | | | | |
| 2 = H-COLOR BAR* | 3 = V-GRAY SCALE* | | | | | | | | | | | | | | | | | | | |
| 4 = H-GRAY SCALE* | 5 = VERTICAL RAMP* | | | | | | | | | | | | | | | | | | | |
| 6 = HORIZONTAL RAMP* | 7 = 100% WHITE RASTER | | | | | | | | | | | | | | | | | | | |
| 8 = 50% WHITE RASTER | 9 = RED RASTER | | | | | | | | | | | | | | | | | | | |
| 10 = GREEN RASTER | 11 = BLUE RASTER | | | | | | | | | | | | | | | | | | | |
| 12 = CROSS HATCH | 13 = OUTPUT FRAME | | | | | | | | | | | | | | | | | | | |
| 14 = VERTICAL STRIPE | 15 = HORIZONTAL STRIPE | | | | | | | | | | | | | | | | | | | |
| 16 = VERTICAL ZEBRA* | 17 = HORIZONTAL ZEBRA* | | | | | | | | | | | | | | | | | | | |
| * Can be scrolled | | | | | | | | | | | | | | | | | | | | |
| scroll: Scrolling 0 = OFF 1 = SLOW 2 = FAST | | | | | | | | | | | | | | | | | | | | |
| Getting example | | | | | | | | | | | | | | | | | | | | |
| @GTP,1<CR><LF> @GTP,1,3,1<CR><LF> | | Getting the OUT1 test pattern • Pattern : V-GRAY SCALE • Scrolling : SLOW | | | | | | | | | | | | | | | | | | |
| Setting example | | | | | | | | | | | | | | | | | | | | |
| @STP,1,1,0<CR><LF> | | Setting the OUT1 test pattern and scrolling to V-COLOR BAR and OFF, respectively | | | | | | | | | | | | | | | | | | |

| @GPI/@SPI | | PinP output |
|---|----------|---|
| Getting | Command | @GPI,output<CR><LF> |
| | Response | @GPI,output,pinp_display(,pinp_display)<CR><LF> |
| Setting | Command | @SPI,output,pinp_display<CR><LF> |
| output: Output channel 0 = All outputs 1 = OUT1 2 = OUT2 | | |
| pinp_display: PinP output 0 = OFF 1 = ON | | |
| Getting example | | |
| @GPI,1<CR><LF> @GPI,1,1<CR><LF> | | Getting the OUT1 PinP output ON |
| Setting example | | |
| @SPI,1,0<CR><LF> | | Setting the OUT1 PinP output to OFF |

Output

| @GVO/@SVO | | Signal output |
|---|----------|--|
| Getting | Command | @GVO,output<CR><LF> |
| | Response | @GVO,output,signal(,signal···)<CR><LF> |
| Setting | Command | @SVO,output,signal<CR><LF> |
| output: Output connector 0 = All outputs 1 = OUT1A 2 = OUT2A 201 = OUT1B 202 = OUT2B | | |
| signal: Signal output 0 = OFF 1 = ON | | |
| Getting example | | |
| @GVO,201<CR><LF> @GVO,201,1<CR><LF> | | Getting the OUT1B signal output ON |
| Setting example | | |
| @SVO,1,1<CR><LF> | | Setting the OUT1A signal output to ON |
| Remarks: If [0] (OFF) is selected, a sink device may be in standby status depending on the device type. | | |

| @GDB/@SDB | | Video mute |
|---|----------|------------------------------------|
| Getting | Command | @GDB,output<CR><LF> |
| | Response | @GDB,output,mute(,mute···)<CR><LF> |
| Setting | Command | @SDB,output,mute<CR><LF> |
| output: Output connector 0 = All outputs 1 = OUT1A 2 = OUT2A 201 = OUT1B 202 = OUT2B | | |
| mute: Video mute 0 = OFF 1 = ON | | |
| Getting example | | |
| @GDB,201<CR><LF> @GDB,201,1<CR><LF> | | Getting the OUT1B video mute ON |
| Setting example | | |
| @SDB,1,1<CR><LF> | | Setting the OUT1A video mute to ON |

| @GEN/@SEN | | HDCP authentication |
|--|----------|--|
| Getting | Command | @GEN,output<CR><LF> |
| | Response | @GEN,output,hdcp,(hdcp···)<CR><LF> |
| Setting | Command | @SEN,output,hdcp<CR><LF> |
| output: Output connector 0 = All outputs 1 = OUT1A 2 = OUT2A 201 = OUT1B 202 = OUT2B Available only for HDMI/HDBaseT connector | | |
| hdcp: HDCP authentication 0 = No HDCP authentication 1 = HDCP output only if HDCP-encrypted signal is input. 2 = HDCP 1.4 3 = HDCP 2.2 | | |
| Getting example | | |
| @GEN,201<CR><LF> @GEN,201,3<CR><LF> | | Getting the OUT1B HDCP authentication HDCP 2.2 |
| Setting example | | |
| @SEN,1,2<CR><LF> | | Setting the OUT1A HDCP authentication to HDCP 1.4 |
| Remarks: If 10GbE connector is specified for an output, [-2] (invalid) is returned for getting command. | | |

| @HAU | | HDCP re-encryption |
|---|---------|------------------------------------|
| Setting | Command | @HAU,output<CR><LF> |
| output: Output connector 1 = OUT1A 2 = OUT2A 201 = OUT1B 202 = OUT2B Available only for HDMI/HDBaseT connector | | |
| Setting example | | |
| @HAU,1<CR><LF> | | Executing re-encrypt HDCP of OUT1A |

| @GCE/@SCE | | CEC connection |
|--|----------|---|
| Getting | Command | @GCE,output<CR><LF> |
| | Response | @GCE,output,cec,(cec···)<CR><LF> |
| Setting | Command | @SCE,output,cec<CR><LF> |
| output: Output connector 0 = All outputs 1 = OUT1A 2 = OUT2A 201 = OUT1B 202 = OUT2B Available only for HDMI/HDBaseT connector | | |
| cec: CEC connection 0 = Not connected 1 = Input channel selected for main window 2 = IN1 3 = IN2 4 = IN3 5 = IN4 6 = IN5 7 = HDMI IN6 107 = HDBaseT IN6 | | |
| Getting example | | |
| @GCE,1<CR><LF> @GCE,1,0<CR><LF> | | Getting the OUT1A CEC connection Not connected |
| Setting example | | |
| @SCE,1,4<CR><LF> | | Setting the OUT1A CEC connection to IN3 |
| Remarks: If 10GbE connector is specified for an output, [-2] (invalid) is returned for getting command. | | |

Input resolution

| @GAP/@SAP | | Aspect ratio |
|---|----------|--|
| Getting | Command | @GAP,input<CR><LF> |
| | Response | @GAP,input,aspect,(,aspect···)<CR><LF> |
| Setting | Command | @SAP,input,aspect<CR><LF> |
| input: Input channel 0 = All inputs 1 to 6 = IN1 to IN6 | | |
| aspect: Aspect ratio 0 = AUTO-1 1 = AUTO-2 2 = 4:3 3 = 14:9 4 = 16:9 5 = 14:9 LETTER BOX 6 = 16:9 LETTER BOX 7 = 4:3 SIDE PANEL 8 = 14:9 SIDE PANEL 9 = THROUGH 10 = FULL | | |
| Getting example | | |
| @GAP,3<CR><LF> @GAP,3,2<CR><LF> | | Getting the IN3 aspect ratio 4:3 |
| Setting example | | |
| @SAP,4,2<CR><LF> | | Setting the IN4 aspect ratio to 4:3 |

| @GAR/@SAR | | Aspect ratio control |
|---|----------|---|
| Getting | Command | @GAR,input<CR><LF> |
| | Response | @GAR,input,mode,(,mode···)<CR><LF> |
| Setting | Command | @SAR,input,mode<CR><LF> |
| input: Input channel 0 = All inputs 1 to 6 = IN1 to IN6 | | |
| mode: Aspect ratio control 0 = Letter box/Side panel 1 = Side cut/Top bottom cut | | |
| Getting example | | |
| @GAR,3<CR><LF> @GAR,3,1<CR><LF> | | Getting the IN3 aspect ratio control Side cut/Top bottom cut |
| Setting example | | |
| @SAR,4,1<CR><LF> | | Setting the IN4 aspect ratio to Side cut/Top bottom cut |

| @GNW/@SNW | | Image position/Image size |
|--|----------|---|
| Getting | Command | @GNW,input<CR><LF> |
| | Response | @GNW,input,h_position,v_position,h_size,v_size,(,h_position,v_position,h_size,· · ·)<CR><LF> |
| Setting | Command | @SNW,input,h_position,v_position,h_size,v_size<CR><LF> |
| input: Input channel 0 = All inputs 1 to 6 = IN1 to IN6 | | |
| h_position: Horizontal image position -40000 to 10000 = -400.00% to 100.00% 0 (0.00%) | | |
| v_position: Vertical image position -40000 to 10000 = -400.00% to 100.00% 0 (0.00%) | | |
| h_size: Horizontal image size 2000 to 40000 = 20.00% to 400.00% 10000 (100.00%) | | |
| v_size: Vertical image size 2000 to 40000 = 20.00% to 400.00% 10000 (100.00%) | | |
| Getting example | | |
| @GNW,1<CR><LF> @GNW,1,-5000,2000,10000,10000<CR><LF> | | Getting the IN1 image position/image size <ul style="list-style-type: none">▪ Horizontal image position : -50.00%▪ Vertical image position : 20.00%▪ Horizontal/Vertical image size : 100.00% |
| Setting example | | |
| @SNW,1,-5000,2000,10000,10000<CR><LF> | | Setting the IN1 image position/image size as follows: <ul style="list-style-type: none">▪ Horizontal image position : -50.00%▪ Vertical image position : 20.00%▪ Horizontal/Vertical image size : 100.00% |

Input

| @GIE/@SIE | | Selecting input connector |
|--|----------|--|
| Getting | Command | @GIE,input<CR><LF> |
| | Response | @GIE,input,mode<CR><LF> |
| Setting | Command | @SIE,input,mode<CR><LF> |
| input: Input channel 6 = IN6 Available only if modular input is installed. | | |
| mode: Input connector 0 = HDMI 1 = 10GbE or HDBaseT | | |
| Getting example | | |
| @GIE,6<CR><LF> @GIE,6,0<CR><LF> | | Getting the input connector to be used for IN6 HDMI |
| Setting example | | |
| @SIE,6,0<CR><LF> | | Setting the IN6 input connector to HDMI |

| @GHE/@SHE | | HDCP input |
|---|----------|---|
| Getting | Command | @GHE,input<CR><LF> |
| | Response | @GHE,input,hdcp(,hdcp···)<CR><LF> |
| Setting | Command | @SHE,input,hdcp<CR><LF> |
| input: Input channel 0 = All inputs 1 to 6 = IN1 to IN6 | | |
| hdcp: HDCP input 0 = NOT SUPPORT 1 = HDCP 1.4 SUPPORT 2 = HDCP 2.2 SUPPORT | | |
| Getting example | | |
| @GHE,1<CR><LF> @GHE,1,2<CR><LF> | | Getting the IN1 HDCP input HDCP 2.2 |
| Setting example | | |
| @SHE,1,0<CR><LF> | | Setting the IN1 HDCP input to NOT SUPPORT |

Input channel automatic switching

| @GAU/@SAU | | Signal ON priority |
|--|----------|--|
| Getting | Command | @GAU,output<CR><LF> |
| | Response | @GAU,output,priority_in1,priority_in2,priority_in3,priority_in4,priority_in5, priority_in6<CR><LF> |
| Setting | Command | @SAU,output,priority_in1,priority_in2,priority_in3,priority_in4,priority_in5, priority_in6<CR><LF> |
| output: Output channel 0 = All outputs* 1 = OUT1 main window 2 = OUT2 main window 201 = OUT1 PinP window 202 = OUT2 PinP window | | |
| *Only for setting | | |
| priority_in1-6: Signal ON priority (IN1 to IN6) 0 = OFF 1 to 6 = Priority (Highest to Lowest) | | |
| Getting example | | |
| @GAU,1<CR><LF> @GAU,1,1,2,3,4,5,6<CR><LF> | | Getting the signal ON priority of the OUT1 main window <ul style="list-style-type: none"> • IN1: 1 • IN2: 2 • IN3: 3 • IN4: 4 • IN5: 5 • IN6: 6 |
| Setting example | | |
| @SAU,1,6,5,4,3,2,1<CR><LF> | | Setting the signal ON priority of the OUT1 main window as follows: <ul style="list-style-type: none"> • IN1: 6 • IN2: 5 • IN3: 4 • IN4: 3 • IN5: 2 • IN6: 1 |

| @GOF/@SOF | | Signal OFF priority |
|--|----------|--|
| Getting | Command | @GOF,output<CR><LF> |
| | Response | @GOF,output,priority_in1,priority_in2,priority_in3,priority_in4,priority_in5,priority_in6,priority_inoff<CR><LF> |
| Setting | Command | @SOF,output,priority_in1,priority_in2,priority_in3,priority_in4,priority_in5,priority_in6,priority_inoff<CR><LF> |
| <p>output: Output channel</p> <p>0 = All outputs* 1 = OUT1 main window 2 = OUT2 main window 201 = OUT1 PinP window 202 = OUT2 PinP window</p> <p>*Only for setting</p> | | |
| <p>priority_in1-off: Signal OFF priority IN1 to IN6, INOFF</p> <p>0 = OFF 1 to 7 = Priority (Highest to Lowest)</p> | | |
| <p>Getting example</p> <p>@GOF,1<CR><LF> @GOF,1,1,2,3,4,5,6,7<CR><LF></p> | | |
| <p>Getting the signal OFF priority of the OUT1 main window</p> <ul style="list-style-type: none"> · IN1 : 1 · IN2 : 2 · IN3 : 3 · IN4 : 4 · IN5 : 5 · IN6 : 6 · INOFF : 7 | | |
| <p>Setting example</p> <p>@SOF,1,7,6,5,4,3,2,1<CR><LF></p> | | |
| <p>Setting the signal OFF priority of the OUT1 main window as follows:</p> <ul style="list-style-type: none"> · IN1 : 7 · IN2 : 6 · IN3 : 5 · IN4 : 4 · IN5 : 3 · IN6 : 2 · INOFF : 1 | | |

| @GAD/@SAD | | Switching mode of automatic switching |
|--|----------|---------------------------------------|
| Getting | Command | @GAD,output<CR><LF> |
| | Response | @GAD,output,mode(mode)<CR><LF> |
| Setting | Command | @SAD,output,mode<CR><LF> |
| <p>output: Output channel</p> <p>0 = All outputs 1 = OUT1 main window 2 = OUT2 main window</p> | | |
| <p>mode: Switching mode</p> <p>0 = Video and Audio 1 = Video 2 = Audio</p> | | |
| <p>Getting example</p> <p>@GAD,1<CR><LF> @GAD,1,2<CR><LF></p> | | |
| <p>Getting the OUT1 main window switching mode of automatic switching</p> <p>Audio</p> | | |
| <p>Setting example</p> <p>@SAD,1,1<CR><LF></p> | | |
| <p>Setting the OUT1 main window switching mode of automatic switching to video</p> | | |

Output audio

| @GUC/@SUC | | Audio output |
|---|----------|--------------------------------------|
| Getting | Command | @GUC,output<CR><LF> |
| | Response | @GUC,output,audio,(audio···)<CR><LF> |
| Setting | Command | @SUC,output,audio<CR><LF> |
| output: Output connector 0 = All outputs 1 = OUT1A 2 = OUT2A 201 = OUT1B 202 = OUT2B | | |
| audio: Audio output 0 = OFF 1 = ON | | |
| Getting example | | |
| @GUC,1<CR><LF> @GUC,1,1<CR><LF> | | Getting the OUT1A audio output ON |
| Setting example | | |
| @SUC,1,1<CR><LF> | | Setting the OUT1A audio output to ON |

| @GAV/@SAV | | Audio level |
|---|----------|--|
| Getting | Command | @GAV,output<CR><LF> |
| | Response | @GAV,output,level,(level···)<CR><LF> |
| Setting | Command | @SAV,output,level<CR><LF> |
| output: Output channel 0 = All outputs 1 = OUT1 2 = OUT2 401 = ANALOG OUT1 402 = ANALOG OUT2 801 = DANTE OUT1* 802 = DANTE OUT2* | | |
| *Available only if modular audio is installed. | | |
| level: Output audio level (dB) -100 to 10 0 | | |
| Getting example | | |
| @GAV,1<CR><LF> @GAV,1,-4<CR><LF> | | Getting the OUT1 output audio level -4 dB |
| Setting example | | |
| @SAV,1,-4<CR><LF> | | Setting the OUT1 output audio level to -4 dB |
| Remarks: Unmuted if changing output audio level. | | |

| @SOL | | Adjusting output audio level |
|---|---------|--|
| Setting | Command | @SOL,output,updown<CR><LF> |
| output: Output channel 0 = All outputs 1 = OUT1 2 = OUT2 401 = ANALOG OUT1 402 = ANALOG OUT2 801 = DANTE OUT1* 802 = DANTE OUT2* | | |
| *Available only if modular audio is installed. | | |
| updown: Relative value [dB] The specified value is added to the current output audio level. -110 to 110 | | |
| Output audio level range: -100 dB to +10 dB | | |
| Setting example | | |
| @SOL,1,-1<CR><LF> | | Decreasing the OUT1 output audio level by 1 dB |
| Remarks: • Unmuted if changing output audio level. • Limited to the maximum/minimum if exceeding the range. | | |

| @GOL | | Output audio limit status | |
|--|---------------------------|---|--|
| Getting | Command | @GOL,output<CR><LF> | |
| | Response | @GOL,output,limit(,limit···)<CR><LF> | |
| output: Output channel | | | |
| 0 | = All outputs | 1 = OUT1 | 2 = OUT2 |
| 401 | = ANALOG OUT1 | 402 = ANALOG OUT2 | 801 = DANTE OUT1* 802 = DANTE OUT2* |
| *Available only if modular audio is installed. | | | |
| limit: Limit status | | | |
| -1 | = Minimum value (-100 dB) | 0 = Not reach limit value | 1 = Maximum value (+10 dB) |
| Getting example | | | |
| @GOL,1<CR><LF> | | Getting the limit status of the OUT1 output audio level | |
| @GOL,1,1<CR><LF> | | Maximum value | |

| @GAM/@SAM | | Mute | |
|--|---------------|------------------------------------|--|
| Getting | Command | @GAM,output<CR><LF> | |
| | Response | @GAM,output,mute(,mute···)<CR><LF> | |
| Setting | Command | @SAM,output,mute<CR><LF> | |
| output: Output channel | | | |
| 0 | = All outputs | 1 = OUT1 | 2 = OUT2 |
| 401 | = ANALOG OUT1 | 402 = ANALOG OUT2 | 801 = DANTE OUT1* 802 = DANTE OUT2* |
| *Available only if modular audio is installed. | | | |
| mute: Audio mute | | | |
| 0 = OFF | 1 = ON | | |
| Getting example | | | |
| @GAM,1<CR><LF> | | Getting the OUT1 audio mute | |
| @GAM,1,1<CR><LF> | | ON | |
| Setting example | | | |
| @SAM,1,1<CR><LF> | | Setting the OUT1 audio mute to ON | |

| @GAE/@SAE | | Analog audio output |
|--|-------------------|--|
| Getting | Command | @GAE,output<CR><LF> |
| | Response | @GAE,output,select(,select)<CR><LF> |
| Setting | Command | @SAE,output,select<CR><LF> |
| output: Output channel | | |
| 0 = All outputs | 401 = ANALOG OUT1 | 402 = ANALOG OUT2 |
| select: Analog audio output | | |
| 1 = OUT1 | 2 = OUT2 | 101 to 106 = IN1 to IN6 |
| 201 = ANALOG IN1 | 202 = ANALOG IN2 | |
| 601 = DANTE IN1* | 602 = DANTE IN2* | |
| *Available only if modular audio is installed. | | |
| Getting example | | |
| @GAE,401<CR><LF> | | Getting the analog audio output of ANALOG OUT1 |
| @GAE,401,1<CR><LF> | | OUT1 |
| Setting example | | |
| @SAE,401,1<CR><LF> | | Setting the analog audio output of ANALOG OUT1 to OUT1 |

| @GDE/@SDE | | Dante output |
|---|----------|---|
| Getting | Command | @GDE,output<CR><LF> |
| | Response | @GDE,output,select(,select)<CR><LF> |
| Setting | Command | @SDE,output,select<CR><LF> |
| output: Output channel 0 = All outputs 801 = DANTE OUT1 802 = DANTE OUT2 Available only if modular audio is installed. | | |
| select: Dante output 1 = OUT1 2 = OUT2 101 to 106 = IN1 to IN6 201 = ANALOG IN1 202 = ANALOG IN2 601 = DANTE IN1 602 = DANTE IN2 | | |
| Getting example | | |
| @GDE,801<CR><LF> @GDE,801,1<CR><LF> | | Getting the DANTE OUT1 Dante output OUT1 |
| Setting example | | |
| @SDE,801,1<CR><LF> | | Setting the DANTE OUT1 Dante output to OUT1 |

Input audio

| @GAS/@SAS | | Input audio |
|--|----------|---|
| Getting | Command | @GAS,input<CR><LF> |
| | Response | @GAS,input,select(,select...)<CR><LF> |
| Setting | Command | @SAS,input,select<CR><LF> |
| input: Input channel 0 = All inputs 1 to 6 = IN1 to IN6 | | |
| select: Input audio 0 = DIGITAL 1 = ANALOG IN1 2 = ANALOG IN2 601 = DANTE IN1* 602 = DANTE IN2* *Available only if modular audio is installed. | | |
| Getting example | | |
| @GAS,1<CR><LF> @GAS,1,1<CR><LF> | | Getting the IN1 input audio ANALOG IN1 |
| Setting example | | |
| @SAS,3,1<CR><LF> | | Setting the IN3 input audio to ANALOG IN1 |

| @GSO/@SSO | | Audio level | | |
|--|--------------|--|------------------|------------------|
| Getting | Command | @GSO,input<CR><LF> | | |
| | Response | @GSO,input,level(,level· · ·)<CR><LF> | | |
| Setting | Command | @SSO,input,level<CR><LF> | | |
| input: Input channel | | | | |
| 0 | = All inputs | 1 to 6 = IN1 to IN6 | 201 = ANALOG IN1 | 202 = ANALOG IN2 |
| 601 | = DANTE IN1* | 602 | = DANTE IN2* | |
| *Available only if modular audio is installed. | | | | |
| level: Input audio level (dB) | | | | |
| -100 | to 10 | 0 | | |
| Getting example | | | | |
| @GSO,4<CR><LF> | | Getting the IN4 input audio level | | |
| @GSO,4,-4<CR><LF> | | -4 dB | | |
| Setting example | | | | |
| @SSO,4,-8<CR><LF> | | Setting the IN4 input audio level to -8 dB | | |

| @SDZ | | Adjusting input audio level | | |
|---|--------------|--|------------------|------------------|
| Setting | Command | @SDZ,input,updown<CR><LF> | | |
| input: Input channel | | | | |
| 0 | = All inputs | 1 to 6 = IN1 to IN6 | 201 = ANALOG IN1 | 202 = ANALOG IN2 |
| 601 | = DANTE IN1* | 602 | = DANTE IN2* | |
| *Available only if modular audio is installed. | | | | |
| updown: Relative value (dB) The specified value is added/subtracted to/from the current input audio level offset. | | | | |
| -110 to 110 | | | | |
| Input audio level range: -100 dB to +10 dB | | | | |
| Setting example | | | | |
| @SDZ,1,-1<CR><LF> | | Decreasing the IN1 input audio level by 1 dB | | |

| @GDZ | | Input audio limit status | | |
|---|--------------|---|------------------|------------------|
| Getting | Command | @GDZ,input<CR><LF> | | |
| | Response | @GDZ,input,limit(limit· · ·)<CR><LF> | | |
| input: Input channel | | | | |
| 0 | = All inputs | 1 to 6 = IN1 to IN6 | 201 = ANALOG IN1 | 202 = ANALOG IN2 |
| 601 | = DANTE IN1* | 602 | = DANTE IN2* | |
| *Available only if modular audio is installed. | | | | |
| limit: Limit status of input audio level | | | | |
| -1 = Minimum value (-100 dB) 0 = Not reach limit value 1 = Maximum value (+10 dB) | | | | |
| Getting example | | | | |
| @GDZ,1<CR><LF> | | Getting the limit status of the IN1 input audio level | | |
| @GDZ,1,1<CR><LF> | | Maximum value | | |

| @GAW/@SAW | | Stable wait (Audio signal) |
|--|----------|--|
| Getting | Command | @GAW,input<CR><LF> |
| | Response | @GAW,input,wait,(,wait···)<CR><LF> |
| Setting | Command | @SAW,input,wait<CR><LF> |
| input: Input channel 0 = All inputs 1 to 6 = IN1 to IN6 | | |
| wait: Stable wait (Audio signal) 0 = OFF 1 = ON | | |
| Getting example | | |
| @GAW,1<CR><LF> @GAW,1,1<CR><LF> | | Getting the IN1 stable wait (Audio signal) ON |
| Setting example | | |
| @SAW,1,0<CR><LF> | | Disabling the IN1 stable wait (Audio signal) |

EDID

| @GED/@SED | | EDID selection |
|---|----------|---|
| Getting | Command | @GED,input<CR><LF> |
| | Response | @GED,input,edid,(edid···)<CR><LF> |
| Setting | Command | @SED,input,edid<CR><LF> |
| input: Input channel 0 = All inputs 1 to 6 = IN1 to IN6 | | |
| edid: EDID 0 = BUILT-IN EDID 1 = EXTERNAL EDID OUT1A 2 = EXTERNAL EDID OUT2A 201 = EXTERNAL EDID OUT1B* ¹ 202 = EXTERNAL EDID OUT2B* 401 to 408 = COPY DATA 1 to COPY DATA 8* * Available only if valid data is stored. | | |
| Getting example | | |
| @GED,1<CR><LF> @GED,1,0<CR><LF> | | Getting the IN1 EDID selection BUILT-IN EDID |
| Setting example | | |
| @SED,2,401<CR><LF> | | Setting the IN2 EDID selection to COPY DATA 1 |

| @GVF/@SVF | | Resolution | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|---------------------------|---|--------------------|--------------------|------------------------|----------|---------------------|---------------------|------------------------|----------------------|---------------------|---------------------|------------------------|-----------------------|------------------------|-----------------------|-------------------------|------------|---------------------------|------------|------------------------|------------------------|-----------------------|------------------------|---------------------|---------------------------|---------------------------|---------------------|---------------------------|---------------------------|
| Getting | Command | @GVF,input<CR><LF> | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Response | @GVF,input,resolution(,resolution···)<CR><LF> | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Setting | Command | @SVF,input,resolution<CR><LF> | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| input: Input channel 0 = All inputs 1 to 6 = IN1 to IN6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| resolution | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table> <tbody> <tr><td>0 = 800x600 (SVGA)</td><td>1 = 1024x768 (XGA)</td></tr> <tr><td>2 = 1280x720 (VESA720)</td><td>3 = 720p</td></tr> <tr><td>4 = 1280x768 (WXGA)</td><td>5 = 1280x800 (WXGA)</td></tr> <tr><td>6 = 1280x960 (QuadVGA)</td><td>7 = 1280x1024 (SXGA)</td></tr> <tr><td>8 = 1360x768 (WXGA)</td><td>9 = 1366x768 (WXGA)</td></tr> <tr><td>10 = 1400x1050 (SXGA+)</td><td>11 = 1440x900 (WXGA+)</td></tr> <tr><td>12 = 1600x900 (WXGA++)</td><td>13 = 1600x1200 (UXGA)</td></tr> <tr><td>14 = 1680x1050 (WSXGA+)</td><td>15 = 1080i</td></tr> <tr><td>16 = 1920x1080 (VESA1080)</td><td>17 = 1080p</td></tr> <tr><td>18 = 1920x1200 (WUXGA)</td><td>19 = 2048x1152 (QWXGA)</td></tr> <tr><td>20 = 2560x1440 (WQHD)</td><td>21 = 2560x1600 (WQXGA)</td></tr> <tr><td>40 = 3840x2160 30Hz</td><td>41 = 3840x2160 60Hz 4:2:0</td></tr> <tr><td>42 = 3840x2160 60Hz 4:4:4</td><td>43 = 4096x2160 30Hz</td></tr> <tr><td>44 = 4096x2160 60Hz 4:2:0</td><td>45 = 4096x2160 60Hz 4:4:4</td></tr> </tbody> </table> | | | 0 = 800x600 (SVGA) | 1 = 1024x768 (XGA) | 2 = 1280x720 (VESA720) | 3 = 720p | 4 = 1280x768 (WXGA) | 5 = 1280x800 (WXGA) | 6 = 1280x960 (QuadVGA) | 7 = 1280x1024 (SXGA) | 8 = 1360x768 (WXGA) | 9 = 1366x768 (WXGA) | 10 = 1400x1050 (SXGA+) | 11 = 1440x900 (WXGA+) | 12 = 1600x900 (WXGA++) | 13 = 1600x1200 (UXGA) | 14 = 1680x1050 (WSXGA+) | 15 = 1080i | 16 = 1920x1080 (VESA1080) | 17 = 1080p | 18 = 1920x1200 (WUXGA) | 19 = 2048x1152 (QWXGA) | 20 = 2560x1440 (WQHD) | 21 = 2560x1600 (WQXGA) | 40 = 3840x2160 30Hz | 41 = 3840x2160 60Hz 4:2:0 | 42 = 3840x2160 60Hz 4:4:4 | 43 = 4096x2160 30Hz | 44 = 4096x2160 60Hz 4:2:0 | 45 = 4096x2160 60Hz 4:4:4 |
| 0 = 800x600 (SVGA) | 1 = 1024x768 (XGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 = 1280x720 (VESA720) | 3 = 720p | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 = 1280x768 (WXGA) | 5 = 1280x800 (WXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 = 1280x960 (QuadVGA) | 7 = 1280x1024 (SXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 = 1360x768 (WXGA) | 9 = 1366x768 (WXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 = 1400x1050 (SXGA+) | 11 = 1440x900 (WXGA+) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 = 1600x900 (WXGA++) | 13 = 1600x1200 (UXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 = 1680x1050 (WSXGA+) | 15 = 1080i | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 16 = 1920x1080 (VESA1080) | 17 = 1080p | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 18 = 1920x1200 (WUXGA) | 19 = 2048x1152 (QWXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 20 = 2560x1440 (WQHD) | 21 = 2560x1600 (WQXGA) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 40 = 3840x2160 30Hz | 41 = 3840x2160 60Hz 4:2:0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42 = 3840x2160 60Hz 4:4:4 | 43 = 4096x2160 30Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 44 = 4096x2160 60Hz 4:2:0 | 45 = 4096x2160 60Hz 4:4:4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Getting example | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| @GVF,3<CR><LF> | | Getting the IN3 resolution | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| @GVF,3,9<CR><LF> | | 1366x768 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Setting example | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| @SVF,1,12<CR><LF> | | Setting the IN1 resolution to 1600x900 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remarks: Available only if [0] (BUILT-IN EDID) is selected for “@GED/@SED EDID selection (P.27)”. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

RS-232C

| @GCT/@SCT | | Communication setting |
|--|----------|--|
| Getting | Command | @GCT,port<CR><LF> |
| | Response | @GCT,port,baudrate,length,parity,stop<CR><LF> |
| Setting | Command | @SCT,port,baudrate,length,parity,stop<CR><LF> |
| port: Connector 1 = RS-232C 101 = OUT1B 102 = OUT2B 206 = IN6B | | |
| baudrate: Baud rate 0 = 4800 bps 1 = 9600 bps 2 = 14400 bps 3 = 19200 bps 4 = 38400 bps 5 = 57600 bps 6 = 115200 bps | | |
| length: Data bit length 0 = 7 bit 1 = 8 bit | | |
| parity: Parity check 0 = NONE 1 = ODD 2 = EVEN | | |
| stop: Stop bit 0 = 1 bit 1 = 2 bit | | |
| Getting example | | |
| @GCT,1<CR><LF> @GCT,1,3,1,0,0<CR><LF> | | Getting the RS-232C communication settings <ul style="list-style-type: none">▪ Baud rate : 19200 bps▪ Data bit length : 8 bit▪ Parity check : NONE▪ Stop bit : 1 bit |
| Setting example | | |
| @SCT,1,3,1,0,0<CR><LF> | | Setting the RS-232C communication as follows: <ul style="list-style-type: none">▪ Baud rate : 19200 bps▪ Data bit length : 8 bit▪ Parity check : NONE▪ Stop bit : 1 bit |

| @GCF/@SCF | | Operation mode |
|---|----------|---|
| Getting | Command | @GCF,port<CR><LF> |
| | Response | @GCF,port,mode(,mode···)<CR><LF> |
| Setting | Command | @SCF,port,mode<CR><LF> |
| port: Connector 0 = All connectors 1 = RS-232C 101 = OUT1B 102 = OUT2B 206 = IN6B | | |
| mode: Operation mode 0 = RECEIVER mode 1 = TRANSMITTER mode RS-232C = RECEIVER mode OUT1B = TRANSMITTER mode OUT2B = TRANSMITTER mode IN6B = RECEIVER mode | | |
| Getting example | | |
| @GCF,1<CR><LF> @GCF,1,1<CR><LF> | | Getting the RS-232C operation mode TRANSMITTER mode |
| Setting example | | |
| @SCF,1,1<CR><LF> | | Setting the RS-232C operation mode to TRANSMITTER mode |
| Remarks: To control the MSD-V6 from control devices, set this menu to RECEIVER mode. To control external devices from the MSD-V6, set this menu to TRANSMITTER mode. | | |

LAN

| @GIP/@SIP | | IP address |
|---|----------|--|
| Getting | Command | @GIP<CR><LF> |
| | Response | @GIP,unit_1,unit_2,unit_3,unit_4<CR><LF> |
| Setting | Command | @SIP,unit_1,unit_2,unit_3,unit_4<CR><LF> |
| unit_1 to unit_4 = Upper bit of the IP address to Lower bit of the IP address | | |
| 0 to 255 192.168.1.199 | | |
| Getting example | | |
| @GIP<CR><LF> | | Getting the IP address |
| @GIP,192,168,3,2<CR><LF> | | 192.168.3.2 |
| Setting example | | |
| @SIP,192,168,3,2<CR><LF> | | Setting the IP address to 192.168.3.2 |

| @GSB/@SSB | | Subnet mask |
|---|----------|--|
| Getting | Command | @GSB<CR><LF> |
| | Response | @GSB,unit_1,unit_2,unit_3,unit_4<CR><LF> |
| Setting | Command | @SSB,unit_1,unit_2,unit_3,unit_4<CR><LF> |
| unit_1 to unit_4 = Upper bit of the subnet mask to Lower bit of the subnet mask | | |
| 0 to 255 255.255.255.0 | | |
| Getting example | | |
| @GSB<CR><LF> | | Getting the subnet mask |
| @GSB,255,255,192,0<CR><LF> | | 255.255.192.0 |
| Setting example | | |
| @SSB,255,255,192,0<CR><LF> | | Setting the subnet mask to 255.255.192.0 |

| @GGW/@SGW | | Gateway address |
|---|----------|--|
| Getting | Command | @GGW<CR><LF> |
| | Response | @GGW,unit_1,unit_2,unit_3,unit_4<CR><LF> |
| Setting | Command | @SGW,unit_1,unit_2,unit_3,unit_4<CR><LF> |
| unit_1 to unit_4 = Upper bit of the gateway address to Lower bit of the gateway address | | |
| 0 to 255 192.168.1.200 | | |
| Getting example | | |
| @GGW<CR><LF> | | Getting the gateway address |
| @GGW,192,168,1,254<CR><LF> | | 192.168.1.254 |
| Setting example | | |
| @SGW,192,168,1,254<CR><LF> | | Setting the gateway address to 192.168.1.254 |

| @GMC | | MAC address |
|---|----------|--|
| Getting | Command | @GMC<CR><LF> |
| | Response | @GMC,unit_1,unit_2,unit_3,unit_4,unit_5,unit_6<CR><LF> |
| unit_1 to unit_6 = Upper bit of the MAC address to Lower bit of the MAC address | | |
| 00 to FF in hex | | |
| Getting example | | |
| @GMC<CR><LF> | | Getting the MAC address |
| @GMC,00,08,E5,00,00,00<CR><LF> | | 00-08-E5-00-00-00 |

| @GLG/@SLG | | Control command destination |
|--|----------|---|
| Getting | Command | @GLG,destination<CR><LF> |
| | Response | @GLG,destination,ip_1,ip_2,ip_3,ip_4,pjlink,(tcp,password)<CR><LF> |
| Setting | Command | @SLG,destination,ip_1,ip_2,ip_3,ip_4,pjlink,(tcp,password)<CR><LF> |
| destination: Destination number 1 to 12 | | |
| ip_1 to ip_4 = Upper bit of the destination IP address to Lower bit of the destination IP address 0 to 255 192.168.1.198 | | |
| pjlink: PJLink protocol connection 0 = PJLink note used 1 = PJLink used | | |
| tcp: Destination port number 1 to 65535 1100 Available only if [0] (PJLink not used) is set to pjlink . | | |
| password: Password of PJLink protocol ASCII 20, 30 to 39, 41 to 5A, 61 to 7A (Up to 32 characters) All 20 (Space) = No password | | |
| <ul style="list-style-type: none"> Available only in TRANSMITTER mode and pjlink is set to [1] (PJLink used). For getting: Returned only if the password is set. For setting: You can skip this password setting if you do not use password authentication for PJLink protocol connection. | | |
| Getting example | | |
| @GLG,3<CR><LF> @GLG,3,192,168,1,2,1, PROJECTOR1<CR><LF> | | Getting Destination 3 <ul style="list-style-type: none"> The destination IP address : 192.168.1.2 PJLink : To be used Password : PROJECTOR1 |
| Setting example | | |
| @SLG,3,192,168,1,2,1<CR><LF> | | Setting Destination 3 as follows: <ul style="list-style-type: none"> The destination IP address : 192.168.1.2 PJLink : To be used Password : Disabling password authentication |

| @GLD/@SLD | | Automatic disconnection time (Timeout) |
|--|----------|--|
| Getting | Command | @GLD,service<CR><LF> |
| | Response | @GLD,service,time<CR><LF> |
| Setting | Command | @SLD,service,time<CR><LF> |
| service: Network service 1 = SERVER (Receiving commands) 2 = CLIENT (Sending commands) | | |
| time: Automatic disconnection time 0 = NOT DISCONNECT 1 to 180 = 1 sec. to 180 sec. SERVER = 30 sec. CLIENT = 3 sec. | | |
| Getting example | | |
| @GLD,1<CR><LF> @GLD,1,120<CR><LF> | | Getting the automatic disconnection time of SERVER 120 sec. |
| Setting example | | |
| @SLD,1,100<CR><LF> | | Setting the automatic disconnection time of SERVER to 100 sec. |

Control commands

| @GEC/@SEC | | Registering/Editing control command (Communication command) | | | | | | | | | | | | | | | | | | |
|--|----------|---|---------------|---------------|---------|---------|---------|--------------|----|----|----|------|---------|---------|---------------|---------------|---------|---------|---------|--------------|
| Getting | Command | @GEC,cmd<CR><LF> | | | | | | | | | | | | | | | | | | |
| | Response | @GEC,cmd,delay,port,memo,length,command,timeout,retry,interval,retryover, display,(recv_1,recv_2···)<CR><LF> | | | | | | | | | | | | | | | | | | |
| Setting | Command | @SEC,cmd,delay,port,memo,length,command,timeout,retry,interval,retryover, display,(recv_1,recv_2···)<CR><LF> | | | | | | | | | | | | | | | | | | |
| cmd: Control command number 1 to 64 | | | | | | | | | | | | | | | | | | | | |
| delay: Delay time 0 to 999999 = 0 sec. to 999.999 sec. 0 (0 sec.) | | | | | | | | | | | | | | | | | | | | |
| port: Output port 1 to 16773427 | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <tr> <td>bit</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td></tr> <tr> <td>port</td><td>reserve</td><td>reserve</td><td>RS-232C OUT2B</td><td>RS-232C OUT1B</td><td>reserve</td><td>reserve</td><td>RS-232C</td><td>LOOP BACK</td></tr> </table> | | | bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | port | reserve | reserve | RS-232C OUT2B | RS-232C OUT1B | reserve | reserve | RS-232C | LOOP BACK |
| bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | | | | | | | | | | | |
| port | reserve | reserve | RS-232C OUT2B | RS-232C OUT1B | reserve | reserve | RS-232C | LOOP BACK | | | | | | | | | | | | |
| <table border="1"> <tr> <td>bit</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td></tr> <tr> <td>port</td><td>LAN 4</td><td>LAN 3</td><td>LAN 2</td><td>LAN 1</td><td>reserve</td><td>reserve</td><td>reserve</td><td>RS-232C IN6B</td></tr> </table> | | | bit | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | port | LAN 4 | LAN 3 | LAN 2 | LAN 1 | reserve | reserve | reserve | RS-232C IN6B |
| bit | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | | | | | | | | | | | | |
| port | LAN 4 | LAN 3 | LAN 2 | LAN 1 | reserve | reserve | reserve | RS-232C IN6B | | | | | | | | | | | | |
| <table border="1"> <tr> <td>bit</td><td>23</td><td>22</td><td>21</td><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td></tr> <tr> <td>port</td><td>LAN 12</td><td>LAN 11</td><td>LAN 10</td><td>LAN 9</td><td>LAN 8</td><td>LAN 7</td><td>LAN 6</td><td>LAN 5</td></tr> </table> | | | bit | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | port | LAN 12 | LAN 11 | LAN 10 | LAN 9 | LAN 8 | LAN 7 | LAN 6 | LAN 5 |
| bit | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | | | | | | | | | | | | |
| port | LAN 12 | LAN 11 | LAN 10 | LAN 9 | LAN 8 | LAN 7 | LAN 6 | LAN 5 | | | | | | | | | | | | |
| Set [1] for the bit of the output port to send a command. The setting value is converted from binary to decimal. (Since 12 bit to 15 bit are not used, they are always [0]). | | | | | | | | | | | | | | | | | | | | |
| Example, | | | | | | | | | | | | | | | | | | | | |
| if you want to send a command from RS-232C: [2] (00000000000000000000000000000010 in binary) | | | | | | | | | | | | | | | | | | | | |
| if sending a command from LAN1: [4096] (000000000001000000000000 in binary) | | | | | | | | | | | | | | | | | | | | |
| memo: Memo Up to 14 characters from 20 to 7D of ASCII code except for 2C (,) Default: All 20 (Space) | | | | | | | | | | | | | | | | | | | | |
| length: Data size of send command (The number of bytes) 0 ~ 30 | | | | | | | | | | | | | | | | | | | | |
| command: Send command data (ASCII code) Specify length x2 digits with 0 to 9, A to F, a to f: (4 bit per digit in hex) | | | | | | | | | | | | | | | | | | | | |
| timeout: Time-out duration 0 to 99999 = 0 sec. to 99.999 sec. 0 (0 sec.) | | | | | | | | | | | | | | | | | | | | |
| retry: The number of retries 0 to 99 0 | | | | | | | | | | | | | | | | | | | | |
| interval: Retry interval 0 to 99999 = 0 sec. to 99.999 sec. 0 (0 sec.) | | | | | | | | | | | | | | | | | | | | |
| retryover: Processing at retry over 0 = Stop processing 1 = Executing the next control command | | | | | | | | | | | | | | | | | | | | |
| display: Displaying received data 0 = Not displayed | | | | | | | | | | | | | | | | | | | | |

| @GEC/@SEC | Registering/Editing control command (Communication command) (Cont'd) |
|--|--|
| recv_1-32: Presence or absence of reply command check | |
| 1 to 32 | |
| <ul style="list-style-type: none"> ▪ For getting: Reply command numbers are separated from each other by a comma. ▪ For setting: The reply command number to be checked can be specified. | |
| Up to 32 commands can be specified by separating them by a comma. | |
| Register reply commands in “@GRC/@SRC Registering/Editing reply command (P.38)”. | |
| Getting example | |
| @GEC,1<CR><LF> | Getting the settings registered in Control command number 1 |
| @GEC,1,10,2,POWER,7,5057204F4E0D0A,1000, | |
| 2,500,0,0,1,2<CR><LF> | |
| <ul style="list-style-type: none"> ▪ Delay time : 10 ms. ▪ Output port : RS-232C ▪ Memo : POWER ▪ Data size : 7 bytes ▪ Command data : PW ON<CR><LF> ▪ Time-out duration : 1000 ms. ▪ The number of retries : 2 times ▪ Retry interval : 500 ms. ▪ Retry over : Stop ▪ Received data : Not displayed ▪ Reply command : Check 1 and 2 | |
| Setting example | |
| @SEC,2,0,1,IN1 SELECT,10, | Setting Control command number 2 as follows: |
| 405353572C312C310D0A,0,0,0,1,0<CR><LF> | |
| <ul style="list-style-type: none"> ▪ Delay time : 0 ms. ▪ Output port : LOOP BACK ▪ Memo : IN1 SELECT ▪ Data size : 10 bytes ▪ Command data : @SSW,1,1<CR><LF> ▪ Time-out duration : 0 ms. ▪ The number of retries : 0 time ▪ Retry interval : 0 ms. ▪ Retry over : Execute ▪ Received data : Not displayed ▪ Reply command : Not check | |

| @GEC/@SEC | | Registering/Editing control command (Displaying received data) | | | | | | |
|---|----------|--|---------------|---------------|---------|---------|---------|--------------|
| Getting | Command | @GEC,cmd<CR><LF> | | | | | | |
| | Response | @GEC,cmd,delay,port,memo,length,command,timeout,retry,interval,retryover,display,delimiter<CR><LF> | | | | | | |
| Setting | Command | @SEC,cmd,delay,port,memo,length,command,timeout,retry,interval,retryover,display,delimiter<CR><LF> | | | | | | |
| cmd: Control command number 1 to 64 | | | | | | | | |
| delay: Delay time 0 to 999999 = 0 sec. to 999.999 sec. 0 (0 sec.) | | | | | | | | |
| port: Output port 1 to 16773171 | | | | | | | | |
| bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| port | reserve | reserve | RS-232C OUT2B | RS-232C OUT1B | reserve | reserve | RS-232C | LOOP BACK |
| bit | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 |
| port | LAN 4 | LAN 3 | LAN 2 | LAN 1 | reserve | reserve | reserve | RS-232C IN6B |
| bit | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
| port | LAN 12 | LAN 11 | LAN 10 | LAN 9 | LAN 8 | LAN 7 | LAN 6 | LAN 5 |
| Set [1] for the bit of the output port to send a command. The setting value is converted from binary to decimal. (Since 12 bit to 15 bit are not used, they are always [0]). | | | | | | | | |
| Example, if you want to send a command from RS-232C: [2] (0000000000000000000000000010 in binary) if sending a command from LAN1: [4096] (000000000001000000000000 in binary) | | | | | | | | |
| memo: Memo Up to 14 characters from 20 to 7D of ASCII code except for 2C (,) Default: All 20 (Space) | | | | | | | | |
| length: Data size of send command (The number of bytes) 0 to 30 | | | | | | | | |
| command: Send command data (ASCII code) Specify length x2 digits with 0 to 9, A to F, a to f: (4 bit per digit in hex) | | | | | | | | |
| timeout: Time-out duration 0 to 99999 = 0 sec. to 99.999 sec. 0 (0 sec.) | | | | | | | | |
| retry: The number of retries 0 to 99 0 | | | | | | | | |
| interval: Retry interval 0 to 99999 = 0 sec. to 99.999 sec. 0 (0 sec.) | | | | | | | | |
| retryover: Processing at retry over 0 = Stop processing 1 = Executing the next control command | | | | | | | | |
| display: Displaying received data 1 = In ASCII 2 = In hex | | | | | | | | |
| delimiter: Delimiter 2 digits of 0 to 9, A to F, a to f = 4 bit per digit in hex for monitoring delimiter 100 = Not monitor | | | | | | | | |

| @GEC/@SEC | Registering/Editing control command (Displaying received data) (Cont'd) |
|---|---|
| <p>Getting example</p> <pre data-bbox="165 242 403 271">@GEC,3<CR><LF></pre> <pre data-bbox="165 316 673 422">@GEC,3,0,4096,POWER STATUS,9, 47455420504F570D0A,2000,2,200,0,1,0D <CR><LF></pre> | <p>Getting the settings registered in Control command number 3</p> <ul style="list-style-type: none"> ▪ Delay time : 0 ms. ▪ Output port : LAN1 ▪ Memo : POWER STATUS ▪ Data size : 9 bytes ▪ Command data : GET POW<CR><LF> ▪ Time-out duration : 2000 ms. ▪ The number of retries : 2 times ▪ Retry interval : 200 ms. ▪ Retry over : Stop ▪ Received data : In ASCII ▪ Delimiter : 0D in hex |
| <p>Setting example</p> <pre data-bbox="165 781 673 887">@SEC,3,0,4096,POWER STATUS,9, 47455420504F570D0A,2000,2,200,0,1,0D <CR><LF></pre> | <p>Setting Control command number 3 as follows:</p> <ul style="list-style-type: none"> ▪ Delay time : 0 ms. ▪ Output port : LAN1 ▪ Memo : POWER STATUS ▪ Data size : 9 bytes ▪ Command data : GET POW<CR><LF> ▪ Time-out duration : 2000 ms. ▪ The number of retries : 2 times ▪ Retry interval : 200 ms. ▪ Retry over : Stop ▪ Received data : In ASCII ▪ Delimiter : 0D in hex |

| @GEC/@SEC | | Registering/Editing control command (Contact closure) | | | | | | | |
|--|-------------------|---|-----|-------------------|-----|-----|---|---|---|
| Getting | Command | @GEC,cmd<CR><LF> | | | | | | | |
| | Response | @GEC,cmd,delay,port,memo,ccno,cc,pulse(,ccno,cc,pulse···)<CR><LF> | | | | | | | |
| Setting | Command | @SEC,cmd,delay,port,memo,ccno,cc,pulse(,ccno,cc,pulse···)<CR><LF> | | | | | | | |
| cmd: Control command number 1 to 64 | | | | | | | | | |
| delay: Delay time 0 to 999999 = 0 sec. to 999.999 sec. 0 (0 sec.) | | | | | | | | | |
| port: Contact closure number 16777216 for contact closure control | | | | | | | | | |
| memo: Memo Up to 14 characters from 20 to 7D of ASCII code except for 2C (,) Default: All 20 (Space) | | | | | | | | | |
| ccno: Contact closure channel | | | | | | | | | |
| ccno | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| | CONTACT CLOSURE 1 | | | CONTACT CLOSURE 2 | | | — | — | — |
| | CH1 | CH2 | CH3 | CH1 | CH2 | CH3 | — | — | — |
| <ul style="list-style-type: none"> For getting: Only contact closure channels to be used for controlling is returned. For setting: Specify only contact closure channels that are used for controlling. | | | | | | | | | |
| cc: Contact closure control 0 = OFF 1 = ON 2 = Toggle 3 = Not control | | | | | | | | | |
| pulse: Pulse width 0 = Hold 100 to 9990 = 100 ms. to 9990 ms. (By 10 ms.) Pulse width after the completion of contact closure. | | | | | | | | | |
| Getting example | | | | | | | | | |
| @GEC,7<CR><LF> @GEC,7,20,16777216,SCREEN UP,1,1,100 <CR><LF> | | | | | | | | | |
| <p>Getting the settings registered in Control command number 7</p> <ul style="list-style-type: none"> Delay time : 20 ms. Memo : SCREEN UP CH1 Contact closure 1: ON for 100 ms. Other contact closures: Not control | | | | | | | | | |
| Setting example | | | | | | | | | |
| @SEC,6,50,16777216,PROJECTOR ON,1,0,200, 2,1,0<CR><LF> | | | | | | | | | |
| <p>Setting Control command number 6 as follows:</p> <ul style="list-style-type: none"> Delay time : 50 ms. Memo : PROJECTOR ON CH1 Contact closure 1: OFF for 200 ms. CH2 Contact closure 1: ON Other contact closures: Not control | | | | | | | | | |

| @GEC/@SEC | | Registering/Editing control command (CEC) |
|--|----------|---|
| Getting | Command | @GEC,cmd<CR><LF> |
| | Response | @GEC,cmd,delay,port,memo,error,output,cec(,output,cec···)<CR><LF> |
| Setting | Command | @SEC,cmd,delay,port,memo,error,output,cec(,output,cec···)<CR><LF> |
| cmd: Control command number 1 to 64 | | |
| delay: Delay time 0 to 999999 = 0 sec. to 999.999 sec. 0 (0 sec.) | | |
| port: CEC control 33554432 for CEC control | | |
| memo: Memo Up to 14 characters from 20 to 7D of ASCII code except for 2C (,) Default: All 20 (Space) | | |
| error: Processing if no response from sink device. 0 = Stop processing 1 = Executing the next control command | | |
| output: Output connector 1 = OUT1A 2 = OUT2A 201 = OUT1B 202 = OUT2B Available only for HDMI/HDBaseT connector <ul style="list-style-type: none"> ▪ For getting: Only output connectors to be used for controlling. ▪ For setting: Specify only output connectors that are used for controlling. | | |
| cec: Control command 0 = Not control 1 = POWER OFF 2 = POWER ON | | |
| Getting example | | |
| @GEC,7<CR><LF> @GEC,7,0,33554432,DISPLAY1 ON,0,1,2 <CR><LF> | | Getting the settings registered in Control command number 7 <ul style="list-style-type: none"> ▪ Delay time : 0 ms ▪ Memo : DISPLAY1 ON ▪ Error : Stop ▪ OUT1A sink device : Turning ON ▪ Other output connectors: Not control |
| Setting example | | |
| @SEC,7,0,33554432,DISPLAY1 ON,0,1,2 <CR><LF> | | Setting Control command number 7 as follows: <ul style="list-style-type: none"> ▪ Delay time : 0 ms ▪ Memo : DISPLAY1 ON ▪ Error : Stop ▪ OUT1A sink device : Turning ON ▪ Other output connectors: Not control |

| @GRC/@SRC | | Registering/Editing reply command |
|---|----------|--|
| Getting | Command | @GRC,reply<CR><LF> |
| | Response | @GRC,reply,process,length,command,mask,memo<CR><LF> |
| Setting | Command | @SRC,reply,process,length,command,mask,memo<CR><LF> |
| reply: Reply command number 1 to 32 | | |
| process: Process 0 = Stop processing 1 = Continue processing 2 = Resending commands | | |
| length: Reply command data size (Bytes) 0 to 30 0 | | |
| command: Reply command data Specify length x2 digits with 0 to 9, A to F, a to f: (4 bit per digit in hexadecimal) Default: All 20 (Space) | | |
| mask: Mask data Specify length x2 digits with 0 to 9, A to F, a to f: (4 bit per digit in hexadecimal) FF | | |
| memo: Memo Up to 14 characters from 20 to 7D of ASCII code except for 2C (,) Default: All 20 (Space) | | |
| Getting example | | |
| @GRC,2<CR><LF> @GRC,2,0,1,40,40,NG<CR><LF> | | Getting the settings registered in Reply command number 2 <ul style="list-style-type: none"> ▪ Processing : Stop ▪ Data size : 1 byte ▪ Command data : 40 in hex ▪ Mask data : 40 (Checking the second bit from the top) ▪ Memo : NG |
| Setting example | | |
| @SRC,1,1,9,52454356204F4B0D0A, FFFFFFFFFFFFFF,OK<CR><LF> | | Setting Reply command number 1 as follows: <ul style="list-style-type: none"> ▪ Processing : Continue ▪ Data size : 9 bytes ▪ Command data : RECV OK<CR><LF> ▪ Mask data : ALL: FF (Checking all bits) ▪ Memo : OK |

| @GCC/@SCC | | Command link |
|--|----------|--|
| Getting | Command | @GCC,event<CR><LF> |
| | Response | @GCC,event,c_1,(c_2,c_3···)<CR><LF> |
| Setting | Command | @SCC,event,c_1,(c_2,c_3···)<CR><LF> |
| event: Control command execution condition For settable values, see the “ Control command execution condition ” below. | | |
| c_1-10: Send command 0 = Not link 1 to 64 = Control command 1 to 64 | | |
| Getting example | | |
| @GCC,30<CR><LF> @GCC,30,5,2,1<CR><LF> | | Getting control commands that will be executed when the MSD-V6 is powered on Executing in order of Control command 5, 2, and 1 |
| Setting example | | |
| @SCC,30,5,2,1<CR><LF> | | Executing in order of Control command 5, 2, and 1 when the MSD-V6 is powered on |
| Remarks: Control commands that are registered in one of the following commands can be linked. <ul style="list-style-type: none">▪ @GEC/@SEC Registering/Editing control command (Communication command) (P.32)▪ @GEC/@SEC Registering/Editing control command (Displaying received data) (P.34)▪ @GEC/@SEC Registering/Editing control command (Contact closure) (P.36)▪ @GEC/@SEC Registering/Editing control command (CEC) (P.37) | | |

Control command execution condition

| event | Execution condition | event | Execution condition |
|-------|---------------------|-------|---------------------|
| 1 | COMMAND F1-PLANE A | 40 | VIDEO:MAIN1-OFF |
| 2 | COMMAND F1-PLANE B | 41 | VIDEO:MAIN1-IN1 |
| 3 | COMMAND F2-PLANE A | 42 | VIDEO:MAIN1-IN2 |
| 4 | COMMAND F2-PLANE B | 43 | VIDEO:MAIN1-IN3 |
| 5 | COMMAND F3-PLANE A | 44 | VIDEO:MAIN1-IN4 |
| 6 | COMMAND F3-PLANE B | 45 | VIDEO:MAIN1-IN5 |
| 7 | COMMAND F4-PLANE A | 46 | VIDEO:MAIN1-IN6 |
| 8 | COMMAND F4-PLANE B | 47 | |
| 9 | COMMAND F5-PLANE A | 48 | |
| 10 | COMMAND F5-PLANE B | 49 | |
| 11 | COMMAND F6-PLANE A | 50 | AUDIO:MAIN1-OFF |
| 12 | COMMAND F6-PLANE B | 51 | AUDIO:MAIN1-IN1 |
| 13 | COMMAND F7-PLANE A | 52 | AUDIO:MAIN1-IN2 |
| 14 | COMMAND F7-PLANE B | 53 | AUDIO:MAIN1-IN3 |
| 15 | COMMAND F8-PLANE A | 54 | AUDIO:MAIN1-IN4 |
| 16 | COMMAND F8-PLANE B | 55 | AUDIO:MAIN1-IN5 |
| 17 | COMMAND F9-PLANE A | 56 | AUDIO:MAIN1-IN6 |
| 18 | COMMAND F9-PLANE B | 57 | |
| 19 | COMMAND FN1-PLANE A | 58 | |
| 20 | COMMAND FN1-PLANE B | 59 | |
| 21 | COMMAND FN2-PLANE A | 60 | VIDEO:MAIN2-OFF |
| 22 | COMMAND FN2-PLANE B | 61 | VIDEO:MAIN2-IN1 |
| 23 | | 62 | VIDEO:MAIN2-IN2 |
| 24 | | 63 | VIDEO:MAIN2-IN3 |
| 25 | | 64 | VIDEO:MAIN2-IN4 |
| 26 | | 65 | VIDEO:MAIN2-IN5 |
| 27 | | 66 | VIDEO:MAIN2-IN6 |
| 28 | | 67 | |
| 29 | | 68 | |
| 30 | POWER ON | 69 | |
| 31 | STANDBY | 70 | AUDIO:MAIN2-OFF |
| 32 | | 71 | AUDIO:MAIN2-IN1 |
| 33 | | 72 | AUDIO:MAIN2-IN2 |
| 34 | | 73 | AUDIO:MAIN2-IN3 |
| 35 | | 74 | AUDIO:MAIN2-IN4 |
| 36 | | 75 | AUDIO:MAIN2-IN5 |
| 37 | | 76 | AUDIO:MAIN2-IN6 |
| 38 | | 77 | |
| 39 | | 78 | |

| @EXC | | Command execution |
|--|---------|---|
| Setting | Command | @EXC,command_1,(command_2···command_5)<CR><LF> |
| command_1-5: Control command 1 to 64 = Control command 1 to 64 A to I = F1 button to F9 button* J to K = FN1 button to FN2 button* | | |
| *Can be set only if [0] (COMMAND) or [1] (DISPLAY POWER) is selected for “@GFA/@SFA Function button assignment (P.47)” | | |
| Setting example1 | | |
| @EXC,1,2,3<CR><LF> | | Executing control command in order of 1→2→3 |
| Setting example2 | | |
| @EXC,6<CR><LF> | | Executing Control command 6 |
| @EXC,6,REPLY:POWER OFF<CR><LF> | | If a command for displaying received data is executed, the received result will be displayed. |
| Remarks: It may take some time to return a reply command. | | |

| @DEC | | Initializing registered command data/function or link |
|---|---------|---|
| Setting | Command | @DEC,no<CR><LF> |
| no: Commands or links you want to initialize 1 to 64 = Control command 1 to 64 101 to 132 = Reply command 1 to 32 201 to 276 = Control command association 1 to 76 【@GCC/@SCC Command link (P.39)】 | | |
| Setting example | | |
| @DEC,230<CR><LF> | | Deleting the POWER ON link |

User preset

| @SCM | | Storing crosspoint memory |
|--|---------|--|
| Setting | Command | @SCM,xpoint,(name)<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| name: Crosspoint memory name Up to 10 characters from 20 to 7D from ASCII code Default: All 20 (Space) You can skip this parameter (name). | | |
| Setting example | | |
| @SCM,2<CR><LF> | | Storing the current video/audio input channels in Crosspoint memory 2 without changing memory name |

| @SCV | | Storing crosspoint memory (Setting video input channel) |
|--|---------|---|
| Setting | Command | @SCV,xpoint(,name)<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| name: Crosspoint memory name Up to 10 characters from 20 to 7D from ASCII code Default: All 20 (Space) You can skip this parameter (name). | | |
| Setting example | | |
| @SCV,2<CR><LF> | | Storing the current video input channel in Crosspoint memory 2 without changing memory name |

| @SCA | | Storing crosspoint memory (Setting audio input channel) |
|--|---------|---|
| Setting | Command | @SCA,xpoint(,name)<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| name: Crosspoint memory name Up to 10 characters from 20 to 7D from ASCII code Default: All 20 (Space) You can skip this parameter (name). | | |
| Setting example | | |
| @SCA,2<CR><LF> | | Storing the current audio input channel in Crosspoint memory 2 without changing memory name |

| @GCM/@ECM | | Editing crosspoint memory |
|--|----------|---|
| Getting | Command | @GCM,xpoint<CR><LF> |
| | Response | @GCM,xpoint,video_main_1,video_main_1,video_pinp_1,video_main_2, audio_main_2,video_pinp_2,name<CR><LF> |
| Setting | Command | @ECM,xpoint,video_main_1,video_main_1,video_pinp_1,video_main_2, audio_main_2,video_pinp_2<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| video_main_1-2: Video input channel of the OUT1/OUT2 main window audio_main_1-2: OUT1/OUT2 audio input channel video_pinp_1-2 : Video input channel of the OUT1/OUT2 PinP window -1 = Not control 0 = OFF 1 to 6 = IN1 to IN6 | | |
| name: Crosspoint memory name Up to 10 characters from 20 to 7D from ASCII code Default: All 20 (Space) You can skip this parameter (name). | | |
| Getting example | | |
| @GCM,2<CR><LF> @GCM,2,3,3,0,4,4,0,PATTERN2 <CR><LF> | | Getting the video/audio input channel of Crosspoint memory 2 <ul style="list-style-type: none"> - Video input channel of the OUT1 main window : IN3 - OUT1 audio input channel : IN3 - Video input channel of the OUT1 PinP window : OFF - Video input channel of the OUT2 main window : IN4 - OUT2 audio input channel : IN4 - Video input channel of the OUT2 PinP window : OFF - Crosspoint memory name : PATTERN2 |
| Setting example | | |
| @ECM,2,-1,-1,-1,-1,-1<CR><LF> | | Setting Crosspoint memory 2 OUT1/OUT2 main window/PinP window of input channel to not control |

| @GCV/@ECV | | Editing crosspoint memory (Setting video input channel) |
|---|----------|---|
| Getting | Command | @GCV,xpoint<CR><LF> |
| | Response | @GCV,xpoint,video_main_1,video_pinp_1,video_main_2,video_pinp_2,name<CR><LF> |
| Setting | Command | @ECV,xpoint,video_main_1,video_pinp_1,video_main_2,video_pinp_2<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| video_main_1-2: Video input channel of the OUT1/OUT2 main window video_pinp_1-2 : Video input channel of the OUT1/OUT2 PinP window -1 = Not control 0 = OFF 1 to 6 = IN1 to IN6 | | |
| name: Crosspoint memory name Up to 10 characters from 20 to 7D from ASCII code Default: All 20 (Space) You can skip this parameter (name). | | |
| Getting example | | |
| @GCV,2<CR><LF> @GCV,2,3,4,-1,1,PATTERN2<CR><LF> | | Getting the video input channel of Crosspoint memory 2 <ul style="list-style-type: none"> ▪ Video input channel of the OUT1 main window : IN3 ▪ Video input channel of the OUT1 PinP window : IN4 ▪ Video input channel of the OUT2 main window : Not control ▪ Video input channel of the OUT2 PinP window : IN1 ▪ Crosspoint memory name : PATTERN2 |
| Setting example | | |
| @ECV,2,-1,-1,-1<CR><LF> | | Setting Crosspoint memory 2 OUT1/OUT2 main window/PinP window of video input channel to not control |

| @GCA/@ECA | | Editing crosspoint memory (Setting audio input channel) |
|--|----------|---|
| Getting | Command | @GCA,xpoint<CR><LF> |
| | Response | @GCA,xpoint,audio_main_1,audio_main_2,name<CR><LF> |
| Setting | Command | @ECA,xpoint,audio_main_1,audio_main_2<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| audio_main_1-2: OUT1/OUT2 audio input channel -1 = Not control 0 = OFF 1 to 6 = IN1 to IN6 | | |
| name: Crosspoint memory name Up to 10 characters from 20 to 7D from ASCII code Default: All 20 (Space) You can skip this parameter (name). | | |
| Getting example | | |
| @GCA,2<CR><LF> @GCA,2,3,4,PATTERN2<CR><LF> | | Getting the audio input channel of Crosspoint memory 2 <ul style="list-style-type: none"> ▪ OUT1 audio input channel : IN3 ▪ OUT2 audio input channel : IN4 ▪ Crosspoint memory name : PATTERN2 |
| Setting example | | |
| @ECA,2,1,1<CR><LF> | | Setting the OUT1/OUT2 audio input channel of Crosspoint memory 2 to IN1 |

| @RCM | | Recalling crosspoint memory |
|--|---------|--|
| Setting | Command | @RCM,xpoint<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| Setting example | | |
| @RCM,1<CR><LF> | | Recalling the video/audio input channel of Crosspoint memory 1 |

| @RCV | | Recalling crosspoint memory (Setting video input channel) |
|--|---------|---|
| Setting | Command | @RCV,xpoint<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| Setting example | | |
| @RCV,1<CR><LF> | | Recalling the video input channel of Crosspoint memory 1 |

| @RCA | | Recalling crosspoint memory (Setting audio input channel) |
|--|---------|---|
| Setting | Command | @RCA,xpoint<CR><LF> |
| xpoint: Crosspoint memory number 1 to 9 | | |
| Setting example | | |
| @RCA,1<CR><LF> | | Recalling the audio input channel of Crosspoint memory 1 |

| @SPM | | Storing preset memory |
|---|---------|--|
| Setting | Command | @SPM,preset(name)<CR><LF> |
| preset: Preset memory number 1 to 9 | | |
| name: Preset memory name Up to 10 characters from 20 to 7D from ASCII code Default: All 20 (Space) You can skip this parameter (name). | | |
| Setting example1 | | |
| @SPM,2<CR><LF> | | Storing the current settings in Preset memory 2 without changing the memory name |
| Setting example2 | | |
| @SPM,2,MEMORY2<CR><LF> | | Storing the current settings in Preset memory 2 with the name of MEMORY2 |

| @RPM | | Recalling preset memory |
|---|---------|---|
| Setting | Command | @RPM,preset,(xpoint)<CR><LF> |
| preset: Preset memory number 1 to 9 | | |
| xpoint: Input channel selection -1 = Does not recall input channel selection and keeps the current input channel selection 0 = Recalls input channel selection that is stored temporarily in preset memory 1 to 9 = Recalls input channel selection that is stored in one of crosspoint memories 1 to 9. If you skip this parameter, recalls input channel selection that is stored in preset memory. | | |
| Setting example | | |
| @RPM,3<CR><LF> | | Recalling Preset memory 3 including input channel selection |

| @SWM | | Storing pattern memory |
|--|---------|--|
| Setting | Command | @SWM,Pattern,output(,name)<CR><LF> |
| pattern: Pattern memory number 1 to 5 | | |
| output: Output channel 1 = OUT1 2 = OUT2 | | |
| name: Pattern memory name Up to 10 characters from 20 to 7D from ASCII code Default: All 20 (Space) You can skip this parameter (name). | | |
| Setting example1 | | |
| @SWM,2,1<CR><LF> | | Storing the OUT1 settings in Pattern memory 2 without changing the memory name |
| Setting example2 | | |
| @SWM,2,1,MEMORY2<CR><LF> | | Storing the OUT1 settings in Pattern memory 2 with the name of MEMORY2 |

| @RWM | | Recalling pattern memory |
|---|---------|--|
| Setting | Command | @RWM,Pattern,output<CR><LF> |
| pattern: Pattern memory number 1 to 5 | | |
| output: Output channel 1 = OUT1 2 = OUT2 | | |
| Setting example | | |
| @RWM,2,1<CR><LF> | | Recalling the Pattern memory 2 to OUT1 |

Bitmap

| @GBM/@SBM | | Bitmap output |
|---|----------|---|
| Getting | Command | @GBM,output<CR><LF> |
| | Response | @GBM,output,bitmap(bitmap···)<CR><LF> |
| Setting | Command | @SBM,output,bitmap<CR><LF> |
| output: Output channel 0 = All outputs 1 = OUT1 main window 2 = OUT2 main window 201 = OUT1 PinP window 202 = OUT2 PinP window | | |
| bitmap: Bitmap output 0 = OFF 1 = Bitmap 1 2 = Bitmap 2 3 = Bitmap 3 4 = Bitmap 4 Only registered numbers can be specified. | | |
| Getting example | | |
| @GBM,0<CR><LF> @GBM,0,1,2,0,0<CR><LF> | | Getting the bitmap output of all outputs - OUT1 main window : Bitmap 1 - OUT2 main window : Bitmap 2 - Other windows : OFF |
| Setting example | | |
| @SBM,1,1<CR><LF> | | Outputting Bitmap 1 to the OUT1 main window |

Configuring MSD-V6

| @GFA/@SFA | | Function button assignment |
|---|----------|--|
| Getting | Command | @GFA,button<CR><LF> |
| | Response | @GFA,button,function(function···)<CR><LF> |
| Setting | Command | @SFA,button,function<CR><LF> |
| button: Function buttons 0 = All buttons 1 to 9 = F1 to F9 button 10 to 11 = FN1 to FN2 button | | |
| function: Assigning function 0 = COMMAND 1 = DISPLAY POWER 21 to 22 = OUT1 PATTERN to OUT2 PATTERN 41 = WINDOW SELECT 61 to 69 = CROSSPOINT No.1 to CROSSPOINT No.9 81 to 89 = PRESETMEMORY No.1 to PRESETMEMORY No.9 | | |
| Getting example | | |
| @GFA,1<CR><LF> @GFA,1,21<CR><LF> | | Getting the function that is assigned to F1 button OUT1 PATTERN |
| Setting example | | |
| @SFA,1,41<CR><LF> | | Setting the F1 button to WINDOW SELECT |

| @RBT | | Reboot |
|-----------------|---------|----------------------|
| Setting | Command | @RBT<CR><LF> |
| Setting example | | |
| @RBT<CR><LF> | | Rebooting the MSD-V6 |

MSD-V6 Series Command Guide

| @CLR | | Initialization |
|---|---------|---------------------------|
| Setting | Command | @CLR,mode<CR><LF> |
| mode | | |
| 0 = ALL INITIALIZE (All settings) 1 = NORMAL INITIALIZE (Settings other than communication settings) | | |
| Setting example | | |
| @CLR,0<CR><LF> | | Initializing all settings |
| Remarks: The MSD-V6 reboots after initialization. | | |

Status

| @GSS | | Input signal/Output signal status |
|--|--|---|
| Getting | Command | @GSS,connector,mode<CR><LF> |
| | Response | @GSS,connector,mode,status_1,(status_2,status_3···)<CR><LF> |
| connector: I/O connectors | | |
| 1 to 6 = IN1 to IN6 ^{*1} 101 = OUT1A 102 = OUT2A 201 = OUT1B 202 = OUT2B 1001 = ANALOG OUT1 1002 = ANALOG OUT2 2001 = DANTE OUT1 ^{*2} 2002 = DANTE OUT2 ^{*2} | | |
| ^{*1} IN6: Input connector selected in “@GIE/@SIE Selecting input connector (P.20)”. | | |
| ^{*2} Available only if modular audio is installed. | | |
| mode: Target status | | |
| connector = 1 to 6 (Input connector) | | |
| 0 = All of 1 to 4 | | 1 = Input signal type ^{*1} |
| 2 = Video input signal resolution ^{*2} | | 3 = Input audio signal format ^{*3} |
| 4 = Presence of HDCP ^{*4} | | |
| connector = 101 to 202 (Output connector) | | |
| 0 = All of 1 to 3 | | 1 = HDCP output ^{*5} |
| 2 = Output signal type ^{*6} | | 3 = Error code ^{*7} |
| connector = 1001 to 2002 (Audio output connector) | | |
| 1 = Error code ^{*7} | | |
| status_1-4: I/O signal status | | |
| ^{*1} Input signal type | | |
| Hxx | HDMI signal is input. xx stands for color depth (24, 30, or 36). | |
| D | DVI signal is input. | |
| N | No signal is input. | |
| ^{*2} Video input signal type | | |
| 1920x1080p 60.00Hz | Signal is input, and Horizontal resolution x Vertical resolution are returned. | |
| NO SIGNAL | No video signal is input. | |
| ^{*3} Input audio signal type | | |
| LINEAR PCM 48kHz | LPCM signal is input, which returns the sampling frequency. | |
| LINEAR PCM 48kHz (MULTI CHANNEL) | Multi-channel LPCM signal is input, which returns the sampling frequency. | |
| COMPRESSED AUDIO | Bitstream audio (such as Dolby Digital and DTS) is input. | |
| NO SIGNAL | No audio signal is input. | |

| @GSS | | Input signal/Output signal status (Cont'd) |
|---------------------------------|--|--|
| ⁴ HDCP input type | | |
| HDCP1.4 | | HDCP 1.4 input |
| HDCP2.2 Type0 | | HDCP 2.2 Type 0 input |
| HDCP2.2 Type1 | | HDCP 2.2 Type 1 input |
| HDCP NOT ENCRYPTED | | No HDCP is input |
| NO SIGNAL | | No video signal is input. |
| ⁵ HDCP output type | | |
| HDCP1.4 | | HDCP 1.4 output |
| HDCP2.2 | | HDCP 2.2 output |
| HDCP2.2 Type0 | | HDCP 2.2 Type 0 output |
| HDCP2.2 Type1 | | HDCP 2.2 Type 1 output |
| HDCP NOT ENCRYPTED | | No HDCP is output |
| HDCP ERROR | | HDCP authentication failed |
| DURING AUTHENTICATION | | Being HDCP encrypted |
| SIGNAL STOPPED | | Video output stops |
| UNCONNECTED | | Sink device is not connected. |
| ⁶ Output signal type | | |
| Hxx | HDMI signal is output. xx stands for color depth (24, 30, or 36). | |
| D | DVI signal is output | |
| C | Being HDCP encrypted and no video is output. | |
| X | Video output stops | |
| N | Sink device is not connected. | |

| @GSS | | Input signal/Output signal status (Cont'd) | | |
|---|--|---|--|--|
| ⁷ Error code of the video output is returned first, and then that of the digital audio output is returned. For video output error code, if [1] (ON) is set for “@GPI/@SPI PinP output (P.16)” and no error for main window, PinP window's error code is returned. | | | | |
| | | | | |
| Error code | Video output status | Audio output status | | |
| 0 | No error | | | |
| 1 | “@GDB/@SDB Video mute (P.17)” is set to [1] (ON). | “@GAM/@SAM Mute (P.24)” is set to [1] (ON). | | |
| 2 | Source device is not connected. (No DDC 5 V signal is input.) | | | |
| 3 | No video signal is input. | No audio signal is input. ⁸ | | |
| 4 | Video or audio output of the source device is muted. | | | |
| 5 | Signal with HDCP is input but sink device is HDCP incompliant (This error code may also be returned during HDCP authentication) | — | | |
| 6 | Source device does not output the returned information (Packets) for output of video or audio. | | | |
| 7 | Signal that is not supported by MSD-V6 (Dot clock is out of range) is input. | Since Bitstream audio (such as Dolby Digital and DTS) is input, audio cannot be output (Bitstream audio can be output only to sink devices supporting these audio). | | |
| 8 | — | “@GUC/@SUC Audio output (P.23)” is set to [0] (OFF). | | |
| 9 | — | [OUTPUT SETTINGS]→[SIGNAL FORMAT] is set to DVI MODE or a sink device that does not support audio is connected. | | |
| A | Input channel selection is set to OFF. | | | |
| ⁸ Only HDMI connector and HDBaseT connector | | | | |
| Getting example1 | | | | |
| @GSS,1,0<CR><LF> @GSS,1,0,H30,1920x1080p 60.00Hz, LINEAR PCM 48kHz,HDCP1.4<CR><LF> | Getting IN1 all statuses <ul style="list-style-type: none">• Input signal type : 30-BIT COLOR HDMI signal• Video input signal : 1920x1080p 60.00Hz• Audio input signal : LINEAR PCM 48kHz• HDCP : HDCP 1.4 | | | |
| Getting example2 | | | | |
| @GSS,101,0<CR><LF> @GSS,101,0,HDCP2.2,H24,00<CR><LF> | Getting OUT1A all statuses <ul style="list-style-type: none">• HDCP : HDCP 2.2• Output signal type : 24-BIT COLOR HDMI signal• Error code : Output correctly | | | |

| @GES | | Viewing sink device EDID |
|---|----------|---|
| Getting | Command | @GES,connector,mode<CR><LF> |
| | Response | @GES,connector,mode,status_1,(status_2,status_3,status_4)<CR><LF> |
| connector: Output connector 1 = OUT1A 2 = OUT2A 201 = OUT1B 202 = OUT2B Available only for HDMI/HDBaseT connector | | |
| mode: Target status 0 = All of 1 to 4 1 = Sink device name 2 = Recommended resolution and dot clock 3 = HDMI, video signal format, and color depth support status ^{*1} 4 = Audio sampling frequency, bit length, the number of channels, and support status of audio signal format ^{*2} | | |
| status_1-4: EDID status SIGNAL STOPPED : Video output stops UNCONNECTED : Sink device is not connected. EDID READ ERROR : Reading EDID fails. | | |
| ^{*1} For sink device that does not support HDMI : [DVI] is returned. For sink device that supports HDMI : [HDMI] is returned, and then supported video signal format (RGB, YCbCr 4:2:2, YCbCr 4:4:4, and YCbCr 4:2:0 separated with /) and supported color depths (24, 30, and 36, separated with /) are returned in that order. | | |
| ^{*2} For sink device that does not support audio : [AUDIO NOT SUPPORT] is returned. For sink device that supports audio : [LINEAR PCM] is returned, and then supported sampling frequencies (32, 44.1, 48, 88.2, 96, 176.4, and 192, separated with /), bit length (16, 20, and 24, separated with /), the number of channels (One of 1 to 8), and [COMPRESSED AUDIO SUPPORT] (If Bitstream audio is supported) are returned in that order. | | |
| Getting example | | |
| @GES,1,0<CR><LF> @GES,1,0,MSD-V62U,1920x1080 148.50MHz, DVI,AUDIO NOT SUPPORT<CR><LF> | | Getting the EDID of the sink device connected to OUT1A <ul style="list-style-type: none">▪ Sink device name : MSD-V62U▪ Recommended resolution: 1920x1080▪ Dot clock : 148.50 MHz▪ HDMI : Not supported▪ Audio : Not supported |

| @GHC | | System check |
|--|----------|---|
| Getting | Command | @GHC<CR><LF> |
| | Response | @GHC,voltage,temp<CR><LF> |
| voltage: Internal voltage status 0 = Normal 1 = Abnormal | | |
| temp: Internal temperature status 0 = Normal 1 = Abnormal | | |
| Getting example | | |
| @GHC<CR><LF> @GHC,1,0<CR><LF> | | Getting the system check result <ul style="list-style-type: none"> ▪ Internal voltage status : Abnormal ▪ Internal temperature status : Normal |


| @GIV | | Device information |
|--|----------|---|
| Getting | Command | @GIV<CR><LF> |
| | Response | @GIV,id,ver<CR><LF> |
| id: Model number | | |
| ver: Firmware version | | |
| Getting example | | |
| @GIV<CR><LF> @GIV,MSD-V62U,01.00.00<CR><LF> | | Getting the product information <ul style="list-style-type: none"> ▪ Model number : MSD-V62U ▪ Firmware version : 01.00.00 |

Unsolicited status notification

Changes in I/O and internal statuses are notified to external devices over LAN communication (UDP).


To enable the unsolicited notification, set the notification interval (“**@SPH Notification interval (P.56)**” to a value other than [0] (OFF).

If no change is detected during the interval, status is sent immediately after detecting a change.

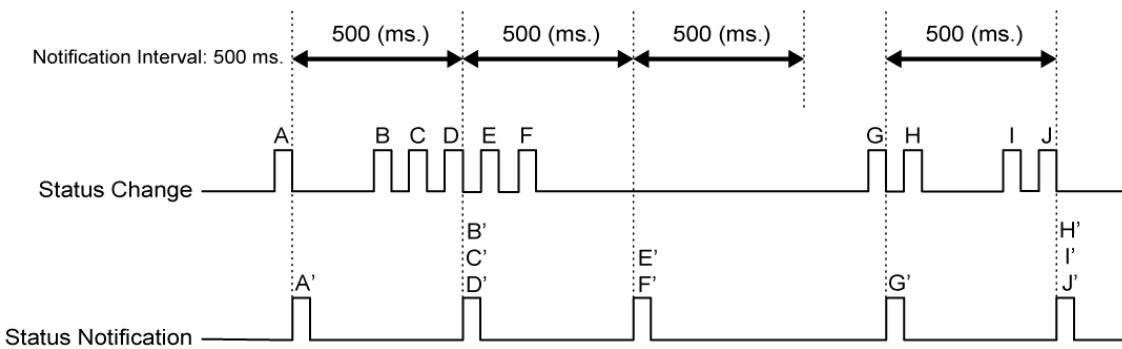

■ Example:

1. Set the destination using “**@GDA/@SDA IP address/UDP port number of destination (P.55)**”.
2. Set the notification interval using “**@SPH Notification interval (P.56)**”.
3. If any status changes, “**@PSH Unsolicited status notification (P.57)**” is sent to the set the IP address destination over UDP protocol.
4. Get the changes in input signal, output signal, and alarm status using “**@AIN Input signal status (For each connector) (P.58)**”, “**@AOT Output signal status (For each channel) (P.60)**”, and “**@GAA Alarm status (P.62)**”.

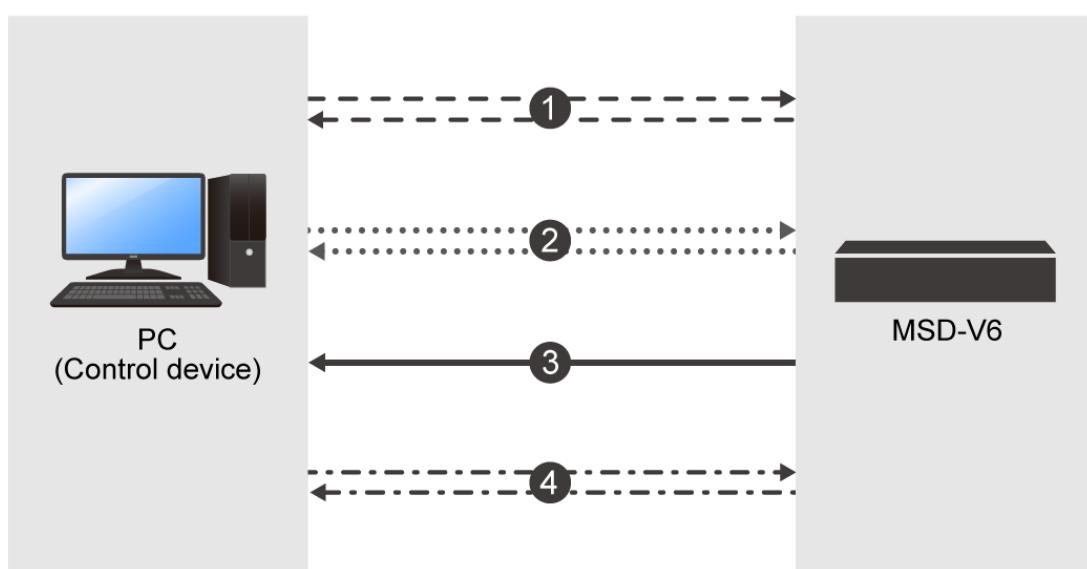

| @GDA/@SDA | | IP address/UDP port number of destination |
|--|----------|--|
| Getting | Command | @GDA,reserve<CR><LF> |
| | Response | @GDA,reserve,unit_1,unit_2,unit_3,unit_4,port<CR><LF> |
| Setting | Command | @SDA,reserve,unit_1,unit_2,unit_3,unit_4,port<CR><LF> |
| reserve: 1 (Fixed) | | |
| unit_1 to unit_4 = Upper bit of the IP address to Lower bit of the IP address 0 to 255 192.168.1.200 | | |
| port: UDP port number 1 to 65535 1147 | | |
| Getting example | | |
| @GDA,1<CR><LF> | | Getting the IP address/UDP port number of destination |
| @GDA,1,192,168,1,200,1147<CR><LF> | | <ul style="list-style-type: none"> ▪ IP address : 192.168.1.200 ▪ UDP port number : 1147 |
| Setting example | | |
| @SDA,1,192,168,1,201,1148<CR><LF> | | Set the IP address/UDP port number of destination to 192.168.1.201 and 1148, respectively. |
| Remarks: If status notification function is enabled ("@GPH/@SPH Notification interval (P.56)" is set to a value other than [0] (OFF)), this command cannot be set. | | |

| @GPH/@SPH | | Notification interval |
|-----------|----------|--------------------------|
| Getting | Command | @GPH<CR><LF> |
| | Response | @GPH,time,save<CR><LF> |
| Setting | Command | @SPH,time(,save)<CR><LF> |

time: Notification time

0 = OFF 1 to 50 = 100 ms. to 5000 ms.

| time | ON/OFF | Time |
|------|--------|----------|
| 0 | OFF | — |
| 1 | ON | 100 ms. |
| 2 | ON | 200 ms. |
| 3 | ON | 300 ms. |
| 4 | ON | 400 ms. |
| 5 | ON | 500 ms. |
| 6 | ON | 600 ms. |
| 7 | ON | 700 ms. |
| 8 | ON | 800 ms. |
| 9 | ON | 900 ms. |
| 10 | ON | 1000 ms. |

| time | ON/OFF | Time |
|------|--------|----------|
| 40 | ON | 4000 ms. |
| 41 | ON | 4100 ms. |
| 42 | ON | 4200 ms. |
| 43 | ON | 4300 ms. |
| 44 | ON | 4400 ms. |
| 45 | ON | 4500 ms. |
| 46 | ON | 4600 ms. |
| 47 | ON | 4700 ms. |
| 48 | ON | 4800 ms. |
| 49 | ON | 4900 ms. |
| 50 | ON | 5000 ms. |

save: Saving setting

0 = Not saving (the notification time will be set to [0] automatically at the next start-up.)

1 = Saving the setting

If this parameter is not specified, the setting is not saved.

Getting example

@GPH<CR><LF>
@GPH,5,1<CR><LF>

Getting notification time

- Notification time : 500 ms.
- Saving the setting : Saving the interval setting

Setting example

@SPH,50<CR><LF>

Setting the interval to 5000 ms. and saving the setting

| @PSH | | Unsolicited status notification | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---------------------------------|-----|-----|-------|---|-------|-------|--|--|-----|---|---|---|---|---|---|---|---|--|--|-----|--|--|-----|-----|-------|-------|-------|-------|--|--|
| Getting | | @PSH,in,out,alarm<CR><LF> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| in: Input status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 = Not change 1 to FF= Changes | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <thead> <tr> <th>bit</th><th>7</th><th>6</th><th>5</th><th>4</th><th>3</th><th>2</th><th>1</th><th>0</th><th></th><th></th></tr> </thead> <tbody> <tr> <td>in</td><td></td><td></td><td>IN6</td><td>IN5</td><td>IN4</td><td>IN3</td><td>IN2</td><td>IN1</td><td></td><td></td></tr> </tbody> </table> | | | | | | | | | | | bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | | in | | | IN6 | IN5 | IN4 | IN3 | IN2 | IN1 | | |
| bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| in | | | IN6 | IN5 | IN4 | IN3 | IN2 | IN1 | | | | | | | | | | | | | | | | | | | | | | | | |
| [1] appears for detected channel, the value is displayed in hex. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 : Changes in IN1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| A: Changes in IN4 and IN2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| out: Output status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 = Not change 1 to FF = Changes | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"> <thead> <tr> <th>bit</th><th>7</th><th>6</th><th>5</th><th>4</th><th>3</th><th>2</th><th>1</th><th>0</th><th></th><th></th></tr> </thead> <tbody> <tr> <td>out</td><td></td><td></td><td></td><td></td><td>OUT2B</td><td>OUT2A</td><td>OUT1B</td><td>OUT1A</td><td></td><td></td></tr> </tbody> </table> | | | | | | | | | | | bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | | out | | | | | OUT2B | OUT2A | OUT1B | OUT1A | | |
| bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| out | | | | | OUT2B | OUT2A | OUT1B | OUT1A | | | | | | | | | | | | | | | | | | | | | | | | |
| [1] appears for detected channel, the value is displayed in hex. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 : Changes in OUT1A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C: Changes in OUT2A and OUT2B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| alarm: Alarm status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 = Not change 1 = Changes | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Getting example | | | | | | Getting the status change | | | | | | | | | | | | | | | | | | | | | | | | | | |
| @PSH,1,0,0<CR><LF> | | | | | | <ul style="list-style-type: none"> ▪ Input status : IN1 ▪ Output status : No changes ▪ Alarm status : No changes | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remarks: Only if status notification function is enabled ("@GPH/@SPH Notification interval (P.56)" is set to a value other than [0] (OFF)), the command can be sent. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| @AIN | | Input signal status (For each connector) |
|---|----------|---|
| Getting | Command | @AIN,in<CR><LF> |
| | Response | @AIN,status_1,status_2,status_3,status_4,status_5,status_6,status_7,status_8, status_9,status_10,status_11,status_12,status_13,status_14,status_15, status_16,status_17,status_18,status_19<CR><LF> |
| in: Input connector 1 to 6 = IN1 to IN6* | | |
| *IN6: Input connector selected in “@GIE/@SIE Selecting input connector (P.20)”. | | |
| status_1: Input connector 1 to 6 = IN1 to IN6 | | |
| status_2: Model number | | |
| status_3: Firmware version | | |
| status_4: The number of valid data = 15 (Fixed) | | |
| status_5: 1 (Fixed) | | |
| status_6: Horizontal resolution of input video 0 = No signal is input. 1920 = 1920 pixels | | |
| status_7: Vertical resolution of input video 0 = No signal is input. 1080 = 1080 lines | | |
| status_8: Vertical sync frequency of input video 0 = No signal is input. 59.94 = 59.94 Hz | | |
| status_9: Progressive or interlace scan 0 = No signal is input. 1 = Progressive 2 = Interlace | | |
| status_10: HDMI/DVI mode of input video 0 = No signal is input. 1 = DVI 2 = HDMI | | |
| status_11: Video signal format of input video 0 = No signal is input. 1 = RGB 2 = YCbCr 4:2:2 3 = YCbCr 4:4:4 4 = YCbCr 4:2:0 255 = Unknown | | |
| status_12: Color range of input video 0 = No signal is input. 1 = Limited range 2 = Full range | | |
| status_13: Color depth of input video 0 = No signal is input. 1 = 24bit/pixel (8bit/component) 2 = 30bit/pixel (10bit/component) 3 = 36bit/pixel (12bit/component) | | |
| status_14: DDC 5 V input status 0 = No signal is input 1 = Signal is input | | |
| status_15: Presence of HDCP 0 = No signal is input. 1 = Without HDCP 2 = HDCP 1.4 3 = HDCP 2.2 Type 0 4 = HDCP 2.2 Type 1 | | |
| status_16: Format of input audio 0 = No signal is input. 1 = LPCM 2 = Bitstream audio | | |
| status_17: Sampling frequency of input audio 0 = No signal is input. 1 = 22.05 kHz 2 = 24 kHz 3 = 32 kHz 4 = 44.1 kHz 5 = 48 kHz 6 = 88.2 kHz 7 = 96 kHz 8 = 176.4 kHz 9 = 192 kHz 10 = 768 kHz 11 = 64 kHz 12 = 128 kHz 255 = Unknown | | |
| status_18: Bit length of input audio 0 = No signal is input. 1 = 16 bit 2 = 17 bit 3 = 18 bit 4 = 19 bit 5 = 20 bit 6 = 21 bit 7 = 22 bit 8 = 23 bit 9 = 24 bit 255 = Unknown | | |
| status_19: HBR mode of input audio 0 = No signal is input. 1 = More other than HBR (LPCM, other Bitstream audio) 2 = HBR mode | | |

| @AIN | Input signal status (For each channel) (Cont'd) |
|--|--|
| Getting example @AIN,1<CR><LF> @AIN,1,MSD-V62U,01.00.00, 15,1,1920,1080,59.94,1,2,1,2, 1,1,2,1,5,9,1<CR><LF> | Getting IN input signal status <ul style="list-style-type: none"> ▪ Input connector : IN1 ▪ Model number : MSD-V62U ▪ Firmware version : 01.00.00 ▪ The number of valid data : 15 ▪ 1 (Fixed) ▪ Horizontal resolution of input video : 1920 pixels ▪ Vertical resolution of input video : 1080 lines ▪ Vertical sync frequency of input video : 59.94 Hz ▪ Progressive or interlace scan : Progressive ▪ HDMI/DVI mode of input video : HDMI ▪ Video signal format of input video : RGB ▪ Color range of input video : Full range ▪ Color depth of input video : 24bit/pixel (8bit/component) ▪ DDC 5 V input status : Signal is input ▪ Presence of HDCP : HDCP 1.4 ▪ Format of input audio : LPCM ▪ Sampling frequency of input audio : 48 kHz ▪ Bit length of input audio : 24 bit ▪ HBR mode of input audio : More other than HBR |

| @AOT | | Output signal status (For each channel) |
|---|----------|---|
| Getting | Command | @AOT,out<CR><LF> |
| | Response | @AOT,status_1,status_2,status_3,status_4,status_5,status_6,status_7,status_8, status_9,status_10,status_11,status_12,status_13,status_14,status_15, status_16,status_17,status_18,status_19,status_20,status_21,status_22, status_23,status_24,status_25<CR><LF> |
| out: Output connector 1 = OUT1A 2 = OUT1B 3 = OUT2A 4 = OUT2B | | |
| status_1: Output connector 1 = OUT1A 2 = OUT1B 3 = OUT2A 4 = OUT2B | | |
| status_2: Model number | | |
| status_3: Firmware version | | |
| status_4: The number of valid data = 21 (Fixed) | | |
| status_5: 1 (Fixed) | | |
| status_6: Select input (Main window) 0 = INOFF 1 to 6 = IN1 to IN6 | | |
| status_7: Horizontal resolution of output video 0 = No signal is output. 1920 = 1920 pixels | | |
| status_8: Vertical resolution of output video 0 = No signal is output. 1080 = 1080 lines | | |
| status_9: Vertical sync frequency of output video 0 = No signal is output. 59.94 = 59.94 Hz | | |
| status_10: Progressive or interlace scan 0 = No signal is output. 1 = Progressive 2 = Interlace | | |
| status_11: HDMI/DVI mode of output video 0 = No signal is output. 1 = DVI 2 = HDMI | | |
| status_12: Video signal format of output video 0 = No signal is output. 1 = RGB 2 = YCbCr 4:2:2 3 = YCbCr 4:4:4 4 = YCbCr 4:2:0 | | |
| status_13: Color range of output video 0 = No signal is output. 1 = Limited range 2 = Full range | | |
| status_14: Color depth of output video 0 = No signal is output. 1 = 24bit/pixel (8bit/component) 2 = 30bit/pixel (10bit/component) 3 = 36bit/pixel (12bit/component) | | |
| status_15: Hot plug detection 0 = Hot plug is detected. 1 = No hot plug is detected. | | |
| status_16: HDCP encryption 0 = No HDCP encryption 1 = HDCP is being encrypted. 2 = HDCP is being encrypted. 3 = HDCP is being encrypted. 4 = HDCP encryption ends normally. 5 = HDCP encryption ends abnormally. | | |
| status_17: HDCP output 0 = No HDCP output 1 = HDCP 1.4 2 = HDCP 2.2 Type 0 3 = HDCP 2.2 Type 1 | | |
| status_18: Format of output audio 0 = No signal is output. 1 = LPCM 2 = Bitstream audio | | |
| status_19: Reading EDID 0 = Sink device is not connected. 1 = Failed 2 = Completed 255 = N/A | | |
| status_20: HDMI/DVI mode (Sink) 0 = Sink device is not connected. 1 = DVI 2 = HDMI (LPCM supported) 3 = HDMI (Bitstream audio supported) 255 = N/A | | |

| @AOT | | Output signal status (For each channel) (Cont'd) | | | | | | | |
|---|--|--|---|---|----------------|----------------|----------------|-----|--|
| status_21: Video signal format (Sink) | | | | | | | | | |
| bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| Color | N/A | - | - | - | YCbCr 4:2:0 | YCbCr 4:4:4 | YCbCr 4:2:2 | RGB | |
| <ul style="list-style-type: none"> “1” appears for supported video signal format, the value is displayed in decimal. [0] : Sink device is not connected. [128] : N/A | | | | | | | | | |
| status_22: Color depth (Sink) | | | | | | | | | |
| 0 = Sink device is not connected. 1 = 24bit/pixel (8bit/component) 2 = 30bit/pixel (10bit/component) 3 = 36bit/pixel (12bit/component) 255 = N/A | | | | | | | | | |
| status_23: HDCP (Sink) | | | | | | | | | |
| 0 = Sink device is not connected. 1 = HDCP is not supported. 2 = HDCP 1.4 supported 3 = HDCP 2.2 supported 255 = N/A | | | | | | | | | |
| status_24: SCDC (Sink) | | | | | | | | | |
| 0 = Sink device is not connected. 1 = SCDC is not supported. 2 = SCDC supported 255 = N/A | | | | | | | | | |
| status_25: HDR (Sink) | | | | | | | | | |
| 0 = Sink device is not connected. 1 = HDR is not supported. 2 = HDR supported 255 = N/A | | | | | | | | | |
| Getting example | | | | | | | | | |
| @AOT,1<CR><LF> @AOT,1,MSD-V62U, 01.00.00,21,1,1,1920, 1080,59.94,1,2,1,2,1,1, 4,1,1,2,2,7,1,2,2,2, <CR><LF> | Getting the OUT1A output signal statuses <ul style="list-style-type: none"> Output connector : OUT1A Model number : MSD-V62U Firmware version : 01.00.00 The number of valid data : 21 1 (Fixed) Select input (Main window) : IN1 Horizontal resolution of output video : 1920 pixels Vertical resolution of output video : 1080 lines Vertical sync frequency of output video : 59.94 Hz Progressive or interlace scan : Progressive HDMI/DVI mode of output video : HDMI Video signal format of output video : RGB Color range of output video : Full range Color depth of output video : 24bit/pixel (8bit/component) Hot plug detection : No hot plug is detected. HDCP encryption : HDCP encryption ends normally. HDCP output : HDCP 1.4 Format of output audio : LPCM Reading EDID : Completed HDMI/DVI mode (Sink) : HDMI (LPCM supported) Video signal format (Sink) : RGB, YCbCr 4:4:4, and YCbCr 4:2:2 supported Color depth (Sink) : 24bit/pixel (8bit/component) HDCP (Sink) : HDCP 1.4 supported SCDC (Sink) : SCDC supported HDR (Sink) : HDR supported | | | | | | | | |

| @GAA | | Alarm status |
|--|----------|--|
| Getting | Command | @GAA<CR><LF> |
| | Response | @GAA,status_1,status_2,status_3,status_4,status_5,status_6<CR><LF> |
| status_1: Model number | | |
| status_2: Firmware version | | |
| status_3: The number of valid data = 3 (Fixed) | | |
| status_4: Power voltage status 0 = Normal 1 = Abnormal | | |
| status_5: Temperature status 0 = Normal 1 = Abnormal | | |
| status_6: FAN status 0 = Normal 1 = Abnormal | | |
| Getting example | | |
| @GAA<CR><LF> @GAA,MSD-V62U,01.00.00,3,0,0,0<CR><LF> | | Getting alarm status <ul style="list-style-type: none"> ▪ Model number : MSD-V62U ▪ Firmware version : 01.00.00 ▪ The number of valid data : 3 ▪ Power voltage status : Normal ▪ Temperature status : Normal ▪ FAN status : Normal |

Digital Multi Switcher

MSD-V6 Series

Command Guide



www.idkav.com

USA

IDK America Inc.

72 Grays Bridge Road Suite 1-C, Brookfield,
CT 06804, United States

TEL: +1-203-204-2445

Email: sales@idkav.com

Europe

IDK Europe GmbH

Lise-Meitner-Str. 6, D-40878 Ratingen, Germany
TEL: +49-2102-578-301-0
Email: info@idkav.eu

Headquarters

IDK Corporation

7-9-1 Chuo, Yamato, Kanagawa, 242-0021, JAPAN
TEL: +81-46-200-0764 FAX: +81-46-200-0765
Email: idk_eng@idk.co.jp

Vietnam

IDK Corporation Vietnam

Hanoi Representative Office
TEL: +84-247-108-8866
Email: info_en@idk.co.jp

IDK Corporation Vietnam

Ho Chi Minh Representative Office
TEL: +84-28-7108-8954
Email: info_en@idk.co.jp